

Summary:


1.	How to connect the wires:.....	4
1.	Reference.....	4
2.	Default settings.....	5
NMT MESSAGES.....		6
3.	Start CANopen node (keypad activation message)	6
4.	Enter pre-operational	6
5.	Reset CANopen node.....	6
6.	Stop CANopen node	7
7.	Boot-up service.....	7
8.	Heartbeat message.....	7
9.	Sync message.....	7
PDO messages		8
10.	Keys state message.....	8
•	PKP 2400SI.....	8
11.	Set LED ON message.....	8
•	PKP 2400SI.....	8
12.	Set LED Blink message	9
•	PKP 2400SI.....	9
13.	LED indicators brightness level.....	10
14.	Backlight setting	10
SDO Messages:		11
15.	Object 2000h: Digital input module, keys states.....	11
•	PKP 2400SI.....	11
16.	Object 2001h: Digital output module.....	12
a)	Set LED ON.....	12
•	PKP 2400SI.....	12
b)	Read LED ON.....	12
•	PKP 2400SI.....	12
17.	Object 2002h: Digital output module.....	13
a)	Set LED blink	13
•	PKP 2400SI.....	13
b)	Read LED blink	13
•	PKP 2400SI.....	13
18.	Object 2003h: Brightness Level	14
a)	LED indicators brightness level:	14

b) Backlight brightness level.....	14
c) Backlight color	15
d) Default backlight color	15
e) Default LED indicators brightness level	16
f) Default backlight brightness level.....	16
19. Object 2010h: Baud rate setting.....	17
20. Object 2011h: Set Boot-up service	18
21. Object 2012h: Set device active on startup.....	19
22. Object 2013h: Set CANopen node ID.....	20
23. Object 2014h: Set startup LED show	21
24. Object 2100h: Set DEMO mode.....	22
25. Object 1016h: Consumer heartbeat time.....	23
26. Object 1017h: Producer heartbeat time	24
Heartbeat message.....	24
27. Object 1000h: Device Type	25
28. Object 1001h: Error Register	25
29. Object 1008h: Manufacturer Device Name.....	25
30. Object 1009h: Manufacturer Hardware Revision.....	26
31. Object 100Ah: Manufacturer Firmware Revision	26
32. Object 100Bh: Model ID	27
33. Object 1011h: Restore default parameters.....	27
34. Object 1018h: Identity Data	28
35. Object 1400h: Receive PDO Communication Parm 0	29
36. Object 1401h: Receive PDO communication Parm 1	30
37. Object 1402h: Receive PDO communication Parm 2	31
38. Object 1403h: Receive PDO communication Parm 3	31
39. Object 1600h: Receive PDO mapping Parameter 0.....	32
40. Object 1601h: Receive PDO mapping Parameter 1.....	33
41. Object 1602h: Receive PDO mapping Parameter 2.....	34
42. Object 1603h: Receive PDO mapping Parameter 3.....	34
43. Object 1800h:	35
a) Transmit PDO Communication Parm 0	35
b) Set periodic state transmission.....	36
44. Object 1A00h Transmit PDO Mapping Parameter.....	36
45. Object 2200h: Serial number string.....	37
46. Set CAN protocol	37
APPENDIX: DEMO Mode instructions.....	38
47. Revision history.....	39


NOTE: this document complies with the following CAN in Automation (CiA) specifications:

- 301 (CANopen application layer and communication profile)
- 401 (Device profile for generic I/O modules)

1. How to connect the wires:

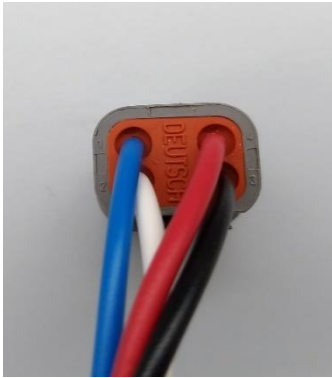

PIN	COLOUR	FUNCTION
1	Blue	CAN L
2	White	CAN H
3	Black	Negative battery
4	Red	Vbatt. (12-24V)

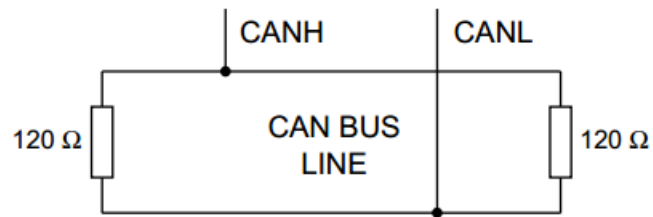

Each end of the CAN bus is terminated with $120\ \Omega$ resistors in compliance with the standard to minimize signal reflections on the bus. You may need to place a $120\ \Omega$ resistor between CAN-L and CAN-H.




Warning: to avoid breakage do not tighten the backshell nuts with a torque exceeding 0.8 Nm!

1. Reference

Front view.

PKP2400SI

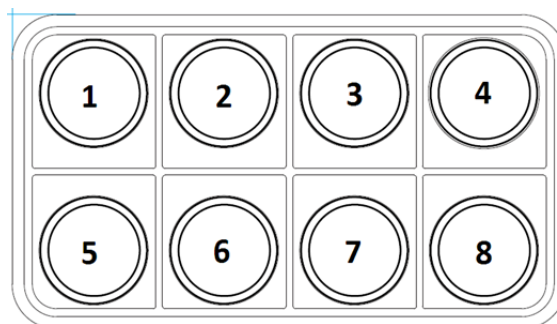

2. Default settings

Setting	Default state or level	How to change
Baud rate	125 kbit/s	Object 2010h
CANopen Node ID	15h	Object 2013h
Device active on startup	Not active	Object 2012h
Default LED indicators brightness	3Fh (Maximum Brightness)	Object 2003h
Default backlight brightness	00h (OFF)	Object 2003h
Default backlight color	Amber	Object 2003h
Startup LED Light Show	Complete LED Sequence	Object 2014h
Periodic key-state transmission	Disabled	Object 1800h
DEMO mode	Disabled	Object 2100h
Heartbeat producer	Disabled	Object 1017h
Heartbeat consumer	Disabled	Object 1016h
Boot-up service	Active	Object 2011h
RPDO 200h transmission type	Event-driven	Object 1400h
RPDO 300h transmission type	Event-driven	Object 1401h
TPDO 180h transmission type	Event-driven	Object 1800h

NMT MESSAGES

The Network Management messages follow a master-slave structure. Through NMT services, CANopen devices are initialized, started, reset or stopped. NMT messages have CAN-ID always equal to 00h.

3. Start CANopen node (keypad activation message)

Identifier	00h	
Byte 0	01h	Start CANopen node
Byte 1	XXh	Keypad CAN ID 00h: start all the keypads 15h: start the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	01 15

4. Enter pre-operational

Identifier	00h	
Byte 0	80h	Enter pre-operational
Byte 1	XXh	Keypad CAN ID 00h: enter all the keypads 15h: enter the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	80 15

5. Reset CANopen node

Identifier	00h	
Byte 0	81h	Reset CANopen node
Byte 1	XXh	Keypad CAN ID 00h: reset all the keypads 15h: reset the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	81 15

6. Stop CANopen node

Identifier	00h	
Byte 0	XXh	02h: Stop CANopen node
		00h: Stop CANopen node (old PKP sw compatibility)
Byte 1	YYh	Keypad CAN ID 00h: stop all the keypads 15h: stop the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	02 15

7. Boot-up service

This service is used to signal that a NMT slave has entered the NMT state Pre-operational.

Identifier	700h + current CAN ID	Default 715h
Byte 0	00h	One data byte is transmitted with value 0.

Example:

Direction	Identifier	Format	Message
From Keypad	715h	Std	00h

The keypad with CAN ID 15h has entered the NMT state Pre-operational.

8. Heartbeat message

The heartbeat mechanism for a CANopen device is established by cyclically transmitting the heartbeat message by the heartbeat producer.

Refer to [Object 1017h](#) for more details.

9. Sync message

This mechanism modifies the PDO operation in the following way: both the RPDOs and TPDOs are stored at the receiving of the 1st SYNC message but, while the RPDOs are always processed with the arrival of next one, the TPDOs are transmitted each n-th time the SYNC message is received depending on the value chosen for transmission type. The structure of the SYNC message is:

Identifier	80h	
-	-	No data byte is transmitted

Refer to Objects [1400-1401-1800h](#) for more details.

PDO messages

PDO (Process Data Object) are fast telegram messages that can simply manage most important functions. There are no answers for this kind of messages. Each PDO message has an equivalent Service Data Object message.

10. Keys state message

The keypad must be activated, see NMT Start CANopen Node message.

- **PKP 2400SI**

Identifier	180h + current CAN ID	Default 195h
Byte 0	Keys from #1 to #8 K8 K7 K6 K5 – K4 K3 K2 K1	Key state: 1=pressed; 0=released
Byte 1, 3	00h	Not used
Byte 4	XXh	Tick Timer*

Examples:

Direction	Identifier	Format	Message	Key state
From Keypad	195	Std	00 00 00 00 XX	No Key pressed
From Keypad	195	Std	08 00 00 00 XX	Only key #4 pressed
From Keypad	195	Std	80 00 00 00 XX	Only key #8 pressed
From Keypad	195	Std	11 00 00 00 XX	Keys #1 and #5 pressed

*= this hexadecimal value increases each 100ms regardless a key state variation has occurred or not. This parameter can be used to evaluate the time interval elapsed between two consecutive key states through the difference of the related two tick timer values. Since this counter is coded on 1-byte length, the maximum time interval which can be monitored is about 25 seconds.

11. Set LED ON message

The keypad must be activated, see NMT Start CANopen Node message.

- **PKP 2400SI**

Identifier	200h + current CAN ID	Default 215h
Byte 0	R8 R7 R6 R5 – R4 R3 R2 R1	Red LED
Byte 1	G8 G7 G6 G5 – G4 G3 G2 G1	Green LED
Byte 2	B8 B7 B6 B5 – B4 B3 B2 B1	Blue LED
Byte 3,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	215	Std	00 00 00 00 00 00 00 00	Turn OFF all the LED
To Keypad	215	Std	01 00 00 00 00 00 00 00	Only red LED #1 ON
To Keypad	215	Std	05 00 00 00 00 00 00 00	Red LED #1 and #3 ON, other LED OFF
To Keypad	215	Std	00 80 00 00 00 00 00 00	Only green LED #8 ON
To Keypad	215	Std	00 00 01 00 00 00 00 00	Only blue LED #1 ON
To Keypad	215	Std	00 11 00 00 00 00 00 00	Green LED #1 and #5 ON, other LED OFF
To Keypad	215	Std	00 0F F0 00 00 00 00 00	Green LED #1, 2, 3 and 4 ON, blue LED #5, 6, 7 and 8 ON

12. Set LED Blink message

The keypad must be activated, see NMT Start CANopen Node message.

Note: if the blink message is sent when the LED is already ON, the LED blinks in alternate mode.

- **PKP 2400SI**

Identifier	300h + current CAN ID	Default 315h
Byte 0	R8 R7 R6 R5 – R4 R3 R2 R1	Red LED
Byte 1	G8 G7 G6 G5 – G4 G3 G2 G1	Green LED
Byte 2	B8 B7 B6 B5 – B4 B3 B2 B1	Blue LED
Byte 3,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	315	Std	00 00 00 00 00 00 00 00	Turn OFF all the LED
To Keypad	315	Std	01 00 00 00 00 00 00 00	Only red LED #1 blinks
To Keypad	315	Std	05 00 00 00 00 00 00 00	Red LED #1 and #3 blink
To Keypad	315	Std	00 20 00 00 00 00 00 00	Only green LED #6 blinks
To Keypad	315	Std	00 00 01 00 00 00 00 00	Only blue LED #1 blinks
To Keypad	315	Std	1F E0 00 00 00 00 00 00	Red LED #1, 2, 3, 4, 5 blink, green LED #6, 7, 8 blink
To Keypad	215 315	Std	FF 00 00 00 00 00 00 00 FF FF 00 00 00 00 00 00	All LED blink red and green in alternate mode

13. LED indicators brightness level

The keypad must be activated, see NMT Start CANopen Node message.

NOTE: this setting has temporary effect and at the startup comes back to the default level. If the default level is desired to change, please refer to the [object 2003h sub-index 05h](#).

Identifier	400h + current CAN ID	Default 415h
Byte 0	XXh	Intensity 00h-3Fh → min-100%
Byte 1, 7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	415	Std	06 00 00 00 00 00 00 00	Brightness = 10%
To Keypad	415	Std	10 00 00 00 00 00 00 00	Brightness = 25%

14. Backlight setting

The keypad must be activated, see NMT Start CANopen Node message.

Note: the default color is the one set by the command [Set default backlight color](#).

Note 2: in case a brightness level value greater than 3Fh is set, the command is neglected.

Note 3: if it is selected as brightness level a value inside the valid range and as backlight color a value outside the available range, the backlight is switched on with the default color.

Identifier	500h + current CAN ID	Default 515h
Byte 0	XXh	Brightness level: 00h-3Fh → 0-100%
Byte 1	YYh	Backlight color:
		00h: default 01h: red 02h: green 03h: blue 04h: yellow
Byte 2,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	515	Std	00 00 00 00 00 00 00 00	Turn off the backlight
To Keypad	515	Std	20 04 00 00 00 00 00 00	Backlight active at 50% with yellow color

SDO Messages:

A SDO (Service Data Object) is providing direct access to object entries of a CANopen device's object dictionary.

15. Object 2000h: Digital input module, keys states

This module contains all the Switch State information.

A one indicates the switch is pressed, a zero indicates the switch is released.

- **PKP 2400SI**

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 2000h
Byte 2	20h	
Byte 3	01h	Sub index
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 20 01 00 00 00 00	
From Keypad	595	Std	4F 00 20 01 00 00 00 00	No Key pressed
			4F 00 20 01 01 00 00 00	Key 1 pressed
			4F 00 20 01 02 00 00 00	Key 2 pressed
			4F 00 20 01 04 00 00 00	Key 3 pressed
			4F 00 20 01 08 00 00 00	Key 4 pressed
			4F 00 20 01 10 00 00 00	Key 5 pressed
			4F 00 20 01 20 00 00 00	Key 6 pressed
			4F 00 20 01 40 00 00 00	Key 7 pressed
			4F 00 20 01 80 00 00 00	Key 8 pressed
			4F 00 20 01 03 00 00 00	Key 1 and 2 pressed
			4F 00 20 01 81 00 00 00	Key 1 and 8 pressed
			4F 00 20 01 FF 00 00 00	All Keys pressed

16. Object 2001h: Digital output module.

This module sets and reads the LED Outputs States. Each bit position represents the corresponding LED. A one indicates the LED is ON a zero indicates the LED is OFF.

a) Set LED ON

- **PKP 2400SI**

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	01h	CAN Object 2001h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED 02h: Green LED 03h: Blue LED
Byte 4	YYh	L8 L7 L6 L5 L4 L3 L2 L1 LED position
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 01 20 01 04 00 00 00	Set red LED #3 ON
From Keypad	595	Std	60 01 20 01 00 00 00 00	Command accepted
To Keypad	615	Std	2F 01 20 03 20 00 00 00	Set blue LED #6 ON
From Keypad	595	Std	60 01 20 03 00 00 00 00	Command accepted

b) Read LED ON

The LED have the same mapping of Set LED ON message

- **PKP 2400SI**

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	01h	CAN Object 2001h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED 02h: Green LED 03h: Blue LED
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 01 20 01 00 00 00 00	Read red LED
From Keypad	595	Std	4F 01 20 01 08 00 00 00	Only red LED #4 ON
To Keypad	615	Std	40 01 20 02 00 00 00 00	Read green LED
From Keypad	595	Std	4F 01 20 02 01 00 00 00	Only green LED #1 ON
To Keypad	615	Std	40 01 20 03 00 00 00 00	Read blue LED
From Keypad	595	Std	4F 01 20 03 20 00 00 00	Only blue LED #6 ON

17. Object 2002h: Digital output module.

This module sets and reads the LED Blink States.

Each bit position represents the corresponding LED. A one indicates the LED is blinking a zero indicates the LED is not blinking. If the blink message is sent when the LED is already ON, the LED blinks in alternate mode.

a) Set LED blink

- **PKP 2400SI**

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	02h	CAN Object 2002h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED 02h: Green LED 03h: Blue LED
Byte 4	YYh	L8 L7 L6 L5 L4 L3 L2 L1 LED position
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 02 20 01 04 00 00 00	Set red LED #3 blink
From Keypad	595	Std	60 02 20 01 00 00 00 00	Command accepted
To Keypad	615	Std	2F 02 20 03 20 00 00 00	Set blue LED #6 blink
From Keypad	595	Std	60 02 20 03 00 00 00 00	Command accepted

b) Read LED blink

- **PKP 2400SI**

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	02h	CAN Object 2002h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED 02h: Green LED 03h: Blue LED
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 02 20 01 00 00 00 00	Read red LED blink
From Keypad	595	Std	4F 02 20 01 FF 00 00 00	All red LED blink
To Keypad	615	Std	40 02 20 02 00 00 00 00	Read green LED blink
From Keypad	595	Std	4F 02 20 02 01 00 00 00	Only green LED #1 blinks
To Keypad	615	Std	40 02 20 03 00 00 00 00	Read blue LED blink
From Keypad	595	Std	4F 02 20 03 00 00 00 00	No blue LED blinks

18. Object 2003h: Brightness Level

a) LED indicators brightness level:

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	01h	Sub index
Byte 4	YYh	Intensity 00h-3Fh → min-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	01h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 01 09 00 00 00	Brightness = 15%
From Keypad	595	Std	60 03 20 01 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 01 00 00 00 00	Read brightness level set
From Keypad	595	Std	4F 03 20 01 09 00 00 00	Brightness = 15%

b) Backlight brightness level

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	02h	Sub index
Byte 4	XXh	Intensity 00h-3Fh → 0-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	02h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 02 0D 00 00 00	Brightness = 20%
From Keypad	595	Std	60 03 20 02 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 02 00 00 00 00	Read brightness level set
From Keypad	595	Std	4F 03 20 02 0D 00 00 00	Brightness = 20%

c) Backlight color

Set message:

Identifier	615h (600h + current CAN ID)		
Byte 0	2Fh	Set Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	03h	Sub index	
Byte 4	XXh	Color 01h: red 02h: green 03h: blue 04h: yellow	05h: cyan 06h: violet 07h: white/light blue 08: amber/orange 09: yellow/green
Byte 5,7	00h	Not used	

Read message:

Identifier	615h (600h + current CAN ID)		
Byte 0	40h	Read Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	03h	Sub index	
Byte 4,7	00h	Not used	

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 03 05 00 00 00	Cyan backlight color
From Keypad	595	Std	60 03 20 03 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 03 00 00 00 00	Read backlight color set
From Keypad 595	595	Std	4F 03 20 03 04 00 00 00	Cyan backlight color

d) Default backlight color

Set message:

Identifier	615h (600h + current CAN ID)		
Byte 0	2Fh	Set Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	04h	Sub index	
Byte 4	XXh	Color 01h: red 02h: green 03h: blue 04h: yellow	05h: cyan 06h: violet 07h: white/light blue 08: amber/orange 09: yellow/green
Byte 5,7	00h	Not used	

Read message:

Identifier	615h (600h + current CAN ID)		
Byte 0	40h	Read Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	04h	Sub index	
Byte 4,7	00h	Not used	

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 04 06 00 00 00	Violet backlight color
From Keypad	595	Std	60 03 20 04 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 04 00 00 00 00	Read default color set
From Keypad	595	Std	4F 03 20 04 06 00 00 00	Violet backlight color

e) Default LED indicators brightness level

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	05h	Sub index
Byte 4	XXh	Intensity 00h-3Fh → min-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	05h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 05 13 00 00 00	Brightness = 30%
From Keypad	595	Std	60 03 20 05 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 05 00 00 00 00	Read brightness level set
From Keypad	595	Std	4F 03 20 05 13 00 00 00	Brightness = 30%

f) Default backlight brightness level

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	06h	Sub index
Byte 4	XXh	Intensity 00h-3Fh → 0-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	06h	Sub index
Byte 5,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 06 00 16 00 00	Backlight level = 35%
From Keypad	595	Std	60 03 20 06 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 06 00 00 00 00	Read backlight level set
From Keypad	595	Std	4F 03 20 06 00 16 00 00	Backlight level = 35%

19. Object 2010h: Baud rate setting

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	10h	CAN Object 2010h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	00h	1000k
	01h	Reserved (force to 125k)
	02h	500k
	03h	250k
	04h	125k (Default)
	05h	Reserved (force to 125k)
	06h	50k
	07h	20k
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	10h	CAN Object 2010h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 10 20 00 04 00 00 00	Baud rate = 125k
From Keypad	595	Std	60 10 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 10 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 10 20 00 04 00 00 00	Baud rate = 125k

20. Object 2011h: Set Boot-up service

Object 2011h message enables or disables the boot up message sent by the keypad at power up to the CAN network.

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	11h	CAN Object 2011h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Not active
		01h: Active
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	11h	CAN Object 2011h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 11 20 00 01 00 00 00	Boot-up service active
From Keypad	595	Std	60 11 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 11 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 11 20 00 01 00 00 00	Boot-up service active

21. Object 2012h: Set device active on startup

If keypad is active on startup don't need the Start CANopen command from host.

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	12h	CAN Object 2012h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Not active
		01h: Active
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	12h	CAN Object 2012h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 12 20 00 01 00 00 00	Device active on startup
From Keypad	595	Std	60 12 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 12 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 12 20 00 00 00 00 00	Device not active on startup

22. Object 2013h: Set CANopen node ID

Note: make sure that when changing node ID to the keypad, no other device on the network has the same address set.

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	13h	CAN Object 2013h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	XX: New node id (01h-7Fh), default 15h
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	13h	CAN Object 2013h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 13 20 00 3A 00 00 00	CANopen node ID set to 3Ah
From Keypad	5BA	Std	60 13 20 00 00 00 00 00	Command accepted
To Keypad	63A	Std	40 13 20 00 00 00 00 00	Read CANopen node ID
From Keypad	5BA	Std	4F 13 20 00 3A 00 00 00	CANopen node ID set to 3Ah

23. Object 2014h: Set startup LED show

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	14h	CAN Object 2014h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Disable
		01h: Complete LED Show (default)
		02h: Fast Flash
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	14h	CAN Object 2014h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 14 20 00 02 00 00 00	Fast flash show enabled
From Keypad	595	Std	60 14 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 14 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 14 20 00 02 00 00 00	Fast flash show enabled

24. Object 2100h: Set DEMO mode

This message enables the Demo mode function. Demo mode is a special feature that consists in different LED states for each button pressing. Refer to the appendix “Demo mode instructions” to try these special features. Disconnect and reconnect the keypad after the enable message to enter this mode. To exit the Demo mode, send the Disable Demo mode command or another command message.

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	00h	CAN Object 2100h
Byte 2	21h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Not active
		01h: Active
Byte 5,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 00 21 00 01 00 00 00	Set DEMO mode Active
From Keypad	595	Std	60 00 21 00 00 00 00 00	Command accepted

25. Object 1016h: Consumer heartbeat time

The consumer heartbeat time object shall indicate the expected heartbeat cycle times. Monitoring of the heartbeat producer shall start after the reception of the first heartbeat.

NOTE 1: the heartbeat consumer time should be greater (typically twice) than the related heartbeat time to be monitored coming from the producer.

NOTE 2: if the keypad does not receive the heartbeat message producer anymore, it turns off all the LEDs eventually ON (both indicators and backlight) and goes to pre-operational state until a new NMT start message is received, even if the producer restarts to transmit the heartbeat.

NOTE 3: if the consumer heartbeat time is set with a value lower than the producer one, the keypad will not be able to change its state from pre-operational to operational.

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
	23h	Set device register
Byte 1	16h	CAN Object 1016h
Byte 2	10h	
Byte 3	ZZh	00h: Highest sub-index supported (read-only) 01h: Sub-index (read/write)
Byte 4	YYh	YYh: Heartbeat time in milliseconds LSByte
Byte 5	XXh	XXh: Heartbeat time in milliseconds MSByte
Byte 6	NNh	Node to be monitored 01h-7Fh (01h default)
Byte 7	00h	Reserved

Heartbeat time: XXYYh (from 000Ah to FFFFh: from 10 to 65535 milliseconds)

When the period is set to 0000h, the consumer heartbeat function is disabled.

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 16 10 00 00 00 00 00	Read highest sub-index supported
From Keypad	595	Std	4F 16 10 00 01 00 00 00	01h is the highest sub-index supported
To Keypad	615	Std	23 16 10 01 64 00 7E 00	Set heartbeat time consumer = 100ms expected from the node 7Eh
From Keypad	595	Std	60 16 10 01 00 00 00 00	Command accepted
To Keypad	615	Std	23 16 10 01 F4 01 01 00	Set heartbeat time consumer= 500ms expected from the node 01h
From Keypad	595	Std	60 16 10 01 00 00 00 00	Command accepted
To Keypad	615	Std	40 16 10 01 00 00 00 00	Read heartbeat consumer time expected from the node 01h
From Keypad	595	Std	43 16 10 01 F4 01 01 00	Heartbeat consumer time set to 500ms

26. Object 1017h: Producer heartbeat time

The producer heartbeat time shall indicate the configured cycle time of the heartbeat.

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
	2Bh	Set device register
Byte 1	17h	CAN Object 1017h
Byte 2	10h	
Byte 3	00h	Sub index
Byte 4	YYh	YYh: Heartbeat time in milliseconds LSByte
Byte 5	XXh	XXh: Heartbeat time in milliseconds MSByte
Byte 6,7	00h	Not used

Heartbeat time: XYYh (from 000Ah to FFFh: from 10 to 65279 milliseconds).

When the period is set to 0000h, the producer heartbeat function is disabled.

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 17 10 00 00 00 00 00	Read heartbeat time
From Keypad	595	Std	4B 17 10 00 64 00 00 00	Heartbeat time = 100ms
To Keypad	615	Std	2B 17 10 00 00 00 00 00	Switch off the heartbeat
From Keypad	595	Std	60 17 10 00 00 00 00 00	Command accepted
To Keypad	615	Std	2B 17 10 00 32 00 00 00	Set heartbeat time = 50ms
From Keypad	595	Std	60 17 10 00 00 00 00 00	Command accepted
To Keypad	615	Std	2B 17 10 00 F4 01 00 00	Set heartbeat time = 500ms
From Keypad	595	Std	60 17 10 00 00 00 00 00	Command accepted

Heartbeat message

The heartbeat mechanism for a CANopen device is established by cyclically transmitting the heartbeat message by the heartbeat producer. One or more CANopen devices in the network are aware of this heartbeat message. If the heartbeat cycle fails for the heartbeat producer, the local application on the heartbeat consumer will be informed about that event.

If a CANopen device starts with a value for the heartbeat producer time unequal to 0 the boot-up message is regarded as first heartbeat message.

Identifier	700h + current CAN ID	Default 715h
Byte 0	XXh	XXh: State of heartbeat producer 00h: Boot-up 04h: Stop 05h: Operational 7Fh: Pre-operational

Example:

Direction	Identifier	Format	Message	Data
From Keypad	715h	Std	00h	Boot up
From Keypad	715h	Std	7Fh	Pre-operational
To Keypad	00h	Std	01h 15h	Start keypad with CAN ID 15h
From Keypad	715h	Std	05h	Operational

27. Object 1000h: Device Type

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 1000h
Byte 2	10h	
Byte 3, 7	00h	Not used

Example:

Direction	Identifier	Format	Data
To Keypad	615	Std	40 00 10 00 00 00 00 00
From Keypad	595	Std	43 00 10 00 91 01 0B 00

Device profile number 0xB0191h.

28. Object 1001h: Error Register

This object is not yet implemented in the device.

29. Object 1008h: Manufacturer Device Name

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	08h	CAN Object 1008h
Byte 2	10h	
Byte 3, 7	00h	Not used

1° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	60h	Read Device Register Next Byte
Byte 1, 7	00h	Not used

2° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	70h	Read Device Register Next Byte
Byte 1, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 08 10 00 00 00 00 00	
From Keypad	595	Std	41 08 10 00 0B 00 00 00	
To Keypad	615	Std	60 00 00 00 00 00 00 00	
From Keypad	595	Std	00 42 6C 69 6E 6B 4D 61	BlinkMa
To Keypad	615	Std	70 00 00 00 00 00 00 00	
From Keypad	595	Std	17 72 69 6E 65 00 00 00	rine

Manufacturer Device Name: BlinkMarine

The first byte of the last data message replied is 17h.

30. Object 1009h: Manufacturer Hardware Revision

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	09h	CAN Object 1009h
Byte 2	10h	
Byte 3, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 09 10 00 00 00 00 00	
From Keypad	595	Std	43 09 10 00 56 5F 30 31	V_01

Manufacturer Hardware Revision: V_01

31. Object 100Ah: Manufacturer Firmware Revision

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	0Ah	CAN Object 100Ah
Byte 2	10h	
Byte 3, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 0A 10 00 00 00 00 00	
From Keypad	595	Std	43 0A 10 00 32 2E 31 30	2.10

Manufacturer Firmware Revision: 2.10

32. Object 100Bh: Model ID

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	0Bh	CAN Object 100Bh
Byte 2	10h	
Byte 3, 7	00h	Not used

1° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	60h	Read Device Register second byte
Byte 1, 7	00h	Not used

2° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	70h	Read Device Register third byte
Byte 1, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 0B 10 00 00 00 00 00	
From Keypad	595	Std	41 0B 10 00 09 00 00 00	
To Keypad	615	Std	60 00 00 00 00 00 00 00	
From Keypad	595	Std	00 50 4B 50 32 34 30 30	PKP2400
To Keypad	615	Std	70 00 00 00 00 00 00 00	
From Keypad	595	Std	1B 53 49 00 00 00 00 00	SI

Model ID: PKP2400SI

The first byte of the last data message replied is 1Bh.

33. Object 1011h: Restore default parameters

With this object the default values of parameters according to the communication profile, device profile, and application profile are restored. This procedure shall only be executed when the specific signature "load" is written to the sub-index 01h. When the message shown in the following table is transmitted, the default values shall be restored after the keypad is reset.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	23h	Set Device Register
Byte 1	11h	CAN Object 1011h
Byte 2	10h	
Byte 3	00h	Highest sub-index supported
	01h	Restore all parameters
Byte 4	6Ch	Character 1 "l"
Byte 5	6Fh	Character 2 "o"
Byte 6	61h	Character 3 "a"
Byte 7	64h	Character 4 "d"

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 11 10 00 00 00 00 00	Read highest sub-index
From Keypad	595	Std	4F 11 10 00 01 00 00 00	1
To Keypad	615	Std	23 11 10 01 6C 6F 61 64	'load'
From Keypad	595	Std	43 11 10 01 00 00 00 00	Command accepted

34. Object 1018h: Identity Data

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	18h	CAN Object 1018h
Byte 2	10h	
Byte 3	00h	Number of mapped objects
	01h	Vendor Id
	04h	Serial number
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 18 10 00 00 00 00 00	
From Keypad	595	Std	4F 18 10 00 04 00 00 00	4
To Keypad	615	Std	40 18 10 01 00 00 00 00	
From Keypad	595	Std	43 18 10 01 E2 03 00 00	000003E2h

Blink Marine Vendor Id: 000003E2h

35. Object 1400h: Receive PDO Communication Parm 0

Describes the Receive Parameters and sets the transmission type for the LED state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	2Fh	Set Device Register
Byte 1	00h	CAN Object 1400h
Byte 2	14h	
Byte 3	00h	Number of mapped objects
	01h	COB Id
	02h	Transmission Type
Byte 4	XXh	Transmission Type (to be used only in set mode): 00h-F0h: synchronous FEh: event-driven
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 14 00 00 00 00 00	
From Keypad	595	Std	4F 00 14 00 02 00 00 00	2
To Keypad	615	Std	40 00 14 01 00 00 00 00	
From Keypad	595	Std	43 00 14 01 15 02 00 00	0000 0215h
To Keypad	615	Std	40 00 14 02 00 00 00 00	
From Keypad	595	Std	4F 00 14 02 FE 00 00 00	FEh
To Keypad	615	Std	2F 00 14 02 01 00 00 00	Set Synchronous RPDO 0
From Keypad	595	Std	60 00 14 02 00 00 00 00	ACK
To Keypad	80	Std	-	SYNC message received
To Keypad	215	Std	01 00 00 00 00 00 00 00	Request LED 1 red ON: the data are buffered
To Keypad	80	Std	-	SYNC message received and message 215 processed

Receive PDO communication Parm 0:

- Number of mapped objects: 2;
- COB id: 0000 0200h + NODE ID;
- Transmission Type: synchronous or event-driven.

36. Object 1401h: Receive PDO communication Parm 1

Describes the Receive Parameters and sets the transmission type for the LED blink PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	2Fh	Set Device Register
Byte 1	01h	CAN Object 1401h
Byte 2	14h	
Byte 3	00h	Number of mapped objects
	01h	COB Id
	02h	Transmission Type
Byte 4	XXh	Transmission Type (to be used only in set mode): 00h-F0h: synchronous FEh: event-driven
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 01 14 00 00 00 00 00	
From Keypad	595	Std	4F 01 14 00 02 00 00 00	2
To Keypad	615	Std	40 01 14 01 00 00 00 00	
From Keypad	595	Std	43 01 14 01 15 03 00 00	0000 0315h
To Keypad	615	Std	40 01 14 02 00 00 00 00	
From Keypad	595	Std	4F 01 14 02 FE 00 00 00	FEh
To Keypad	615	Std	2F 01 14 02 00 00 00 00	Set Synchronous RPDO 1
From Keypad	595	Std	60 01 14 02 00 00 00 00	ACK
To Keypad	80	Std	-	SYNC message received
To Keypad	315	Std	00 01 00 00 00 00 00 00	Request LED 1 green blinking: the data are buffered
To Keypad	80	Std	-	SYNC message received and message 315 processed

Receive PDO communication Parm 1:

- Number of mapped objects: 2;
- COB id: 0000 0300h + NODE ID;
- Transmission Type: synchronous or event driven.

37. Object 1402h: Receive PDO communication Parm 2

Describes the Receive Parameters for Indicator LED brightness

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	02h	CAN Object 1402h
Byte 2	14h	
Byte 3	00h	Highest sub-index supported
	01h	COB Id
	02h	Transmission Type
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 02 14 00 00 00 00 00	
From Keypad	595	Std	4F 02 14 00 02 00 00 00	2
To Keypad	615	Std	40 02 14 01 00 00 00 00	
From Keypad	595	Std	43 02 14 01 15 04 00 00	0000 0415h
To Keypad	615	Std	40 02 14 02 00 00 00 00	
From Keypad	595	Std	4F 02 14 02 FE 00 00 00	FEh

Receive PDO communication Parm 2:

- Number of mapped objects: 2;
- COB id: 0000 0400h + NODE ID;
- Transmission Type: FEh.

38. Object 1403h: Receive PDO communication Parm 3

Describes the Receive Parameters for backlight LED brightness

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 1403h
Byte 2	14h	
Byte 3	00h	Highest sub-index supported
	01h	COB Id
	02h	Transmission Type
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 03 14 00 00 00 00 00	
From Keypad	595	Std	4F 03 14 00 02 00 00 00	2
To Keypad	615	Std	40 03 14 01 00 00 00 00	
From Keypad	595	Std	43 03 14 01 15 05 00 00	0000 0515h
To Keypad	615	Std	40 03 14 02 00 00 00 00	
From Keypad	595	Std	4F 03 14 02 FE 00 00 00	FEh

Receive PDO communication Parm 3:

- Number of mapped objects: 2;
- COB id: 0000 0500h + NODE ID;
- Transmission Type: FEh.

39. Object 1600h: Receive PDO mapping Parameter 0

Describes the mapping of LED state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 1600h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
	02h	PDO Mapping Entry 2
	03h	PDO Mapping Entry 3
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 16 00 00 00 00 00	
From Keypad	595	Std	4F 00 16 00 03 00 00 00	3
To Keypad	615	Std	40 00 16 01 00 00 00 00	
From Keypad	595	Std	43 00 16 01 08 01 01 20	2001 01 08
To Keypad	615	Std	40 00 16 02 00 00 00 00	
From Keypad	595	Std	43 00 16 02 08 02 01 20	2001 02 08
To Keypad	615	Std	40 00 16 03 00 00 00 00	
From Keypad	595	Std	43 00 16 03 08 03 01 20	2001 03 08

Receive PDO mapping Parameter 0:

- Number of mapped objects: 3;
- Set LED red: Object 2001h, Sub index 01h, Length 08h;
- Set LED green: Object 2001h, Sub index 02h, Length 08h;
- Set LED blue: Object 2001h, Sub index 03h, Length 08h.

40. Object 1601h: Receive PDO mapping Parameter 1

Describes the mapping of LED blink state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	01h	CAN Object 1601h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
	02h	PDO Mapping Entry 2
	03h	PDO Mapping Entry 3
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 01 16 00 00 00 00 00	
From Keypad	595	Std	4F 01 16 00 03 00 00 00	3
To Keypad	615	Std	40 01 16 01 00 00 00 00	
From Keypad	595	Std	43 01 16 01 08 01 02 20	2002 01 08
To Keypad	615	Std	40 01 16 02 00 00 00 00	
From Keypad	595	Std	43 01 16 02 08 02 02 20	2002 02 08
To Keypad	615	Std	40 01 16 03 00 00 00 00	
From Keypad	595	Std	43 01 16 03 08 03 02 20	2002 03 08

Receive PDO mapping Parameter 1:

- Number of mapped objects: 3;
- Set LED red blink: Object 2002h, Sub index 01h, Length 08h;
- Set LED green blink: Object 2002h, Sub index 02h, Length 08h;
- Set LED blue blink: Object 2002h, Sub index 03h, Length 08h.

41. Object 1602h: Receive PDO mapping Parameter 2

Describes the mapping of Indicator LED brightness PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	02h	CAN Object 1602h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 02 16 00 00 00 00 00	
From Keypad	595	Std	4F 02 16 00 01 00 00 00	1
To Keypad	615	Std	40 02 16 01 00 00 00 00	
From Keypad	595	Std	43 02 16 01 08 01 03 20	2003 01 08

Receive PDO mapping Parameter 2:

- Number of mapped objects: 1;
- Set Indicator LED brightness: Object 2003h, Sub index 01h, Length 08h.

42. Object 1603h: Receive PDO mapping Parameter 3

Describes the mapping of backlight setting PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 1603h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
	02h	PDO Mapping Entry 2
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 03 16 00 00 00 00 00	
From Keypad	595	Std	4F 03 16 00 02 00 00 00	2
To Keypad	615	Std	40 03 16 01 00 00 00 00	
From Keypad	595	Std	43 03 16 01 08 02 03 20	2003 02 08
To Keypad	615	Std	40 03 16 02 00 00 00 00	
From Keypad	595	Std	43 03 16 02 08 03 03 20	2003 03 08

Receive PDO mapping Parameter 3:

- Number of mapped objects: 2;
- Backlight brightness level: Object 2003h, Sub index 02h, Length 08h;
- Backlight color: Object 2003h, Sub-index 03h, Length 08h.

43. Object 1800h:

a) Transmit PDO Communication Parm 0

Describes the Transmission Parameters and sets the transmission type for the Key state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	2Fh	Set Device Register
Byte 1	00h	CAN Object 1800h
Byte 2	18h	
Byte 3	00h	Highest sub-index supported
	01h	COB Id
	02h	Transmission Type
	05h	Event Timer (Periodic transmission time)
Byte 4	XXh	Transmission Type (to be used only in set mode): 01h: synchronous (cyclic every SYNC) 02h: synchronous (cyclic every 2 nd SYNC) 03h: synchronous (cyclic every 3 rd SYNC) 04h: synchronous (cyclic every 4 th SYNC) F0h: synchronous (cyclic every 240 th SYNC) FEh: event-driven (default)
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 18 00 00 00 00 00	
From Keypad	595	Std	4F 00 18 00 05 00 00 00	5
To Keypad	615	Std	40 00 18 01 00 00 00 00	
From Keypad	595	Std	43 00 18 01 95 01 00 00	0000 0195h
To Keypad	615	Std	40 00 18 02 00 00 00 00	
From Keypad	595	Std	4F 00 18 02 FE 00 00 00	FEh: event-driven type
To Keypad	615	Std	40 00 18 05 00 00 00 00	
From Keypad	595	Std	4B 00 18 05 00 00 00 00	0000h: Periodic transmission disabled.
To Keypad	615	Std	2F 00 18 02 01 00 00 00	Set the Synchronous transmission (cyclic every SYNC).
From Keypad	595	Std	60 00 18 02 00 00 00 00	ACK
To Keypad	80	Std	-	SYNC message received
Key #1 pressed No message on the CAN bus				
From Keypad	195	Std	00 00 00 00 XX	Key status sent/ Read key status
To Keypad	80	Std	-	SYNC message received
From Keypad	195	Std	01 00 00 00 XX	Key status sent/ Read key status

Transmit PDO communication Parm 0:

- Highest sub-index supported: 5;
- Address base: 195h= 180h+ NODE ID;
- Transmission Type: synchronous or event-driven;
- Periodic Transmission timer: XXYY in milliseconds, 0 = OFF.

b) Set periodic state transmission

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Bh	Set device register
Byte 1	00h	CAN Object 1800h
Byte 2	18h	
Byte 3	05h	Sub index
Byte 4	YYh	YYh: Periodic transmission timer in milliseconds LSByte
Byte 5	XXh	XXh: Periodic transmission timer in milliseconds MSByte
Byte 6, 7	00h	Not used

Periodic Transmission timer: XXYh (from 000Ah to FEFh: from 10 to 65279 milliseconds).

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2B 00 18 05 00 00 00 00	Switch off the periodic state transmission
From Keypad	595	Std	60 00 18 05 00 00 00 00	Command accepted
To Keypad	615	Std	2B 00 18 05 32 00 00 00	Set period = 50ms
From Keypad	595	Std	60 00 18 05 00 00 00 00	Command accepted
To Keypad	615	Std	2B 00 18 05 F4 01 00 00	Set period = 500ms
From Keypad	595	Std	60 00 18 05 00 00 00 00	Command accepted

44. Object 1A00h Transmit PDO Mapping Parameter

Describes the mapping of Key state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 1A00h
Byte 2	1Ah	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 1A 00 00 00 00 00	
From Keypad	595	Std	4F 00 1A 00 01 00 00 00	1
To Keypad	615	Std	40 00 1A 01 00 00 00 00	
From Keypad	595	Std	43 00 1A 01 08 01 00 20	2000 01 08

Transmit PDO Mapping Parameter:

- Number of mapped objects: 1;
- Switch state: Object 2000h, Sub index 01h, Length 08h.

45. Object 2200h: Serial number string

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 2200h
Byte 2	22h	
Byte 3,7	00h	Not used

1° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	60h	Read Device Register second byte
Byte 1, 7	00h	Not used

2° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	70h	Read Device Register third byte
Byte 1, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 22 00 00 00 00 00	
From Keypad	595	Std	41 00 22 00 08 00 00 00	
To Keypad	615	Std	60 00 00 00 00 00 00 00	
From Keypad	595	Std	00 46 46 46 46 46 46 46	FFFFFF
To Keypad	615	Std	70 00 00 00 00 00 00 00	
From Keypad	595	Std	1D 46 00 00 00 00 00 00	F

Serial number: ascii FFFFFFFF

The first byte of the last data message replied is 1Dh.

46. Set CAN protocol

This set of messages are used to change to the desired CANbus protocol.

- Change from CANopen to J1939:

Direction	Identifier	Format	Message	Data
To Keypad	615h	Std	2B FF 20 01 01	Change to J1939

- Change from J1939 to CANopen:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 80 00 FF FF FF FF	Change to CANopen

APPENDIX: DEMO Mode instructions

In DEMO Mode you can try the following functions by pressing buttons on the PKP2400SI.

Entering this mode, you turn the LED indicators on with red color; each time you press the key 1, you can change the color of the indicators with the following sequence:

1. Red;
2. Green;
3. Blue;
4. Yellow;
5. Cyan;
6. Magenta;
7. White/light blue;
8. Amber;
9. Yellow/green;
10. OFF.

Holding down key 2, you can increase LED brightness level.

Holding down key 3, you can decrease LED brightness level.

If you press the key 4, there are different steps in this sequence:

1. Complete LED show of all colors;
2. Backlight active with keys on in sequence (it is possible to change the color of LED keys by pressing button 1);
3. Alternate blinking of LED keys number 1 red color; 2 with amber color; 3 with yellow; 4 with green color; 5 with violet color; 7 with blue color and 6-8 with white/light blue color.

In the case you press the other keys there are no events.

47. Revision history

Date	Manual Revision	Comment	Related SW version
03/11/2017	1.0	First release	2.x
31/01/2018	1.1	Second release <ul style="list-style-type: none"> • Added Objects 1402h, 1403h • Included some examples in the table of set LED on and set LED blink functions • Corrected value identifier in the reply message of object 2013h: SET CANopen NODE ID • Added set CAN protocol command and APPENDIX: DEMO MODE instructions 	x.x
08/06/2018	1.2	Third release <ul style="list-style-type: none"> • Added object 1016h: heartbeat consumer time • Enabled synchronous transmission for RPDOs 200h/300h and TPDO 180h 	
21/02/2019	1.3	Fourth release <ul style="list-style-type: none"> • Added warning note at page 3 	
08/03/2019	1.4	Fifth release <ul style="list-style-type: none"> • Added object 1011h 	
25/10/2021	1.5	Sixth release: <ul style="list-style-type: none"> • Added SDO read commands; • DEMO mode instructions chapter reviewed; • Added note concerning TICK TIMER; • Modified the PDO backlight command; • Added sub-index 02h in the object 1603h; • Added note on page 3; 	