

## Summary:

1. How to connect the wires:.....	4
2. Reference.....	5
3. Default settings.....	5
NMT MESSAGES.....	6
4. Start CANopen node (keypad activation message) .....	6
5. Enter pre-operational .....	6
6. Reset CANopen node.....	6
7. Stop CANopen node .....	7
8. Boot-up service.....	7
9. Heartbeat message.....	7
10. Sync message.....	7
PDO messages .....	8
11. Keys state message.....	8
• PK1400 .....	8
12. Set LED ON message.....	8
• PK1400 RED.....	8
• PK1400 GREEN .....	9
13. LED indicators brightness level.....	10
14. Backlight setting .....	10
SDO Messages: .....	11
15. Object 2000h: Digital input module, keys states.....	11
• PK1400 .....	11
16. Object 2001h: Digital output module.....	12
a) Set LED ON.....	12
• PK1400 .....	12
b) Read LED ON.....	13
• PK1400 .....	13
17. Object 2002h: Digital output module.....	14
a) Set LED blink .....	14
• PK1400 .....	14
b) Read LED blink .....	15
• PK1400 .....	15
18. Object 2003h: Brightness Level .....	16
a) LED indicators brightness level: .....	16
b) Backlight brightness level.....	16
c) Backlight color.....	17

d)	Default backlight color .....	17
e)	Default LED indicators brightness level .....	18
f)	Default backlight brightness level.....	18
19.	Object 2010h: Baud rate setting.....	19
20.	Object 2011h: Set Boot-up service .....	20
21.	Object 2012h: Set device active on startup.....	21
22.	Object 2013h: Set CANopen node ID.....	22
23.	Object 2014h: Set startup LED show .....	23
24.	Object 2015h: LED Power supply.....	23
25.	Object 2100h: Set DEMO mode.....	24
26.	Object 20FFh: BUS setting .....	24
27.	Object 1016h: Consumer heartbeat time.....	25
28.	Object 1017h: Producer heartbeat time .....	26
	Heartbeat message.....	26
29.	Object 1000h: Device Type .....	27
30.	Object 1001h: Error Register .....	27
31.	Object 1008h: Manufacturer Device Name.....	28
32.	Object 1009h: Manufacturer Hardware Revision.....	28
33.	Object 100Ah: Manufacturer Firmware Revision .....	29
34.	Object 100Bh: Model ID .....	29
35.	Object 1011h: Restore default parameters.....	30
36.	Object 1018h: Identity Data .....	30
37.	Object 1400h: Receive PDO communication Parm 0 .....	31
38.	Object 1401h: Receive PDO communication Parm 1 .....	32
39.	Object 1402h: Receive PDO communication Parm 2 .....	33
40.	Object 1403h: Receive PDO communication Parm 3 .....	33
41.	Object 1600h: Receive PDO mapping Parameter 0.....	34
42.	Object 1601h: Receive PDO mapping Parameter 1.....	34
43.	Object 1602h: Receive PDO mapping Parameter 2.....	35
44.	Object 1603h: Receive PDO mapping Parameter 3.....	35
45.	Object 1800h: .....	36
a)	Transmit PDO Communication Parm 0 .....	36
b)	Set periodic state transmission.....	37
46.	Object 1A00h Transmit PDO Mapping Parameter.....	37
47.	Object 2200h: Serial number string.....	38
48.	Set CAN protocol .....	38
	APPENDIX: DEMO Mode instructions.....	39
49.	Revision history.....	40


NOTE: this document complies with the following CAN in Automation (CiA) specifications:

- 301 (CANopen application layer and communication profile)
- 401 (Device profile for generic I/O modules)

## 1. How to connect the wires:



PIN	COLOUR	FUNCTION
1	Blue	CAN L
2	White	CAN H
3	Black	Negative battery
4	Red	Vbatt. (12-24V)

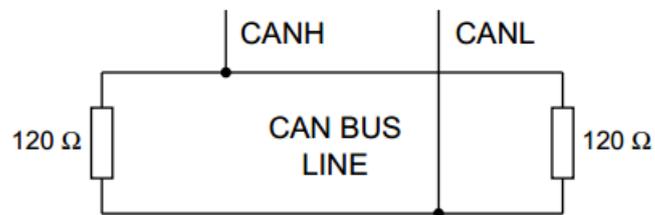


Each end of the CAN bus is terminated with  $120\Omega$  resistors in compliance with the standard to minimize signal reflections on the bus. You may need to place a  $120\Omega$  resistor between CAN-L and CAN-H.



Warning: to avoid breakage do not tighten the backshell nuts with a torque exceeding 1.8 Nm!

## 2. Reference

PowerKey front view.

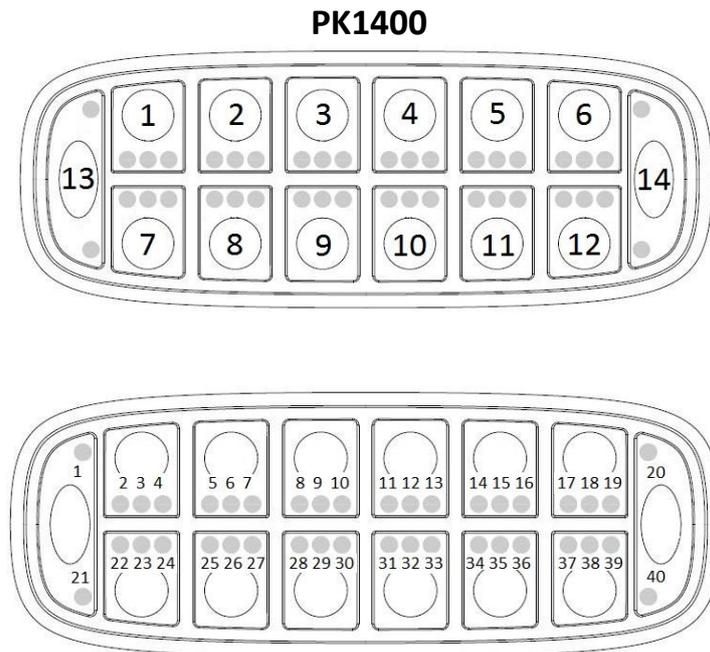

## 3. Default settings

Setting	Default state or level	How to change
Baud Rate	125 kbit/s	<a href="#">Object 2010h</a>
CANopen Node ID	15h	<a href="#">Object 2013h</a>
Device active on startup	Not active	<a href="#">Object 2012h</a>
Key Brightness	3Fh (Maximum Brightness)	<a href="#">Object 2003h</a>
Backlight Brightness	00h (OFF)	<a href="#">Object 2003h</a>
Backlight Color	Amber	<a href="#">Object 2003h</a>
Startup LED Light Show	Complete LED Sequence	<a href="#">Object 2014h</a>
Periodic Message Transmission	Disable	<a href="#">Object 1800h</a>
DEMO mode	Disable	<a href="#">Object 2100h</a>
Heartbeat Producer	Disable	<a href="#">Object 1017h</a>
Heartbeat Consumer	Disable	<a href="#">Object 1016h</a>
Boot-up service	Active	<a href="#">Object 2011h</a>
RPDO transmission type	Asynchronous	Object <a href="#">1400h-1401h</a>
TPDO transmission type	Event-driven	<a href="#">Object 1800h</a>
Restore default parameters	-	<a href="#">Object 1011h</a>

## NMT MESSAGES

The Network Management messages follow a master-slave structure. Through NMT services, CANopen devices are initialized, started, reset or stopped. All CANopen devices are regarded as NMT slaves. NMT messages have CAN-ID always equal to 00h.

### 4. Start CANopen node (keypad activation message)

Identifier	00h	
Byte 0	01h	Start CANopen node
Byte 1	XXh	Keypad CAN ID 00h: start all the keypads 15h: start the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	01 15

### 5. Enter pre-operational

Identifier	00h	
Byte 0	80h	Enter pre-operational
Byte 1	XXh	Keypad CAN ID 00h: enter all the keypads 15h: enter the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	80 15

### 6. Reset CANopen node

Identifier	00h	
Byte 0	81h	Reset CANopen node
Byte 1	XXh	Keypad CAN ID 00h: reset all the keypads 15h: reset the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	81 15

## 7. Stop CANOpen node

Identifier	00h	
Byte 0	XXh	02h: Stop CANOpen node
		00h: Stop CANOpen node (old sw compatibility)
Byte 1	YYh	Keypad CAN ID
		00h: stop all the keypads 15h: stop the keypad with CAN ID = 15h.
Byte 2, 7	00h	Not used

Example:

Direction	Identifier	Format	Message
To Keypad	0	Std	02 15

## 8. Boot-up service

This service is used to signal that a NMT slave has entered the NMT state Pre-operational.

Identifier	700h + current CAN ID	Default 715h
Byte 0	00h	One data byte is transmitted with value 0.

Example:

Direction	Identifier	Format	Message
From Keypad	715h	Std	00h

The keypad with CAN ID 15h has entered the NMT state Pre-operational.

## 9. Heartbeat message

The heartbeat mechanism for a CANOpen device is established by cyclically transmitting the heartbeat message by the heartbeat producer.

Refer to [Object 1017h](#) for more details.

## 10. Sync message

This mechanism modifies the PDO operation in the following way: both the RPDOs and TPDOs are stored at the receiving of the 1<sup>st</sup> message but, while the RPDOs are always processed with the arrival of next one, the TPDOs are transmitted each n-th time the SYNC message is received depending on the value chosen for the transmission type. The structure of the SYNC message is:

Identifier	80h	
-	-	No data byte is transmitted

Refer to Objects [1400-1401-1800h](#) for more details.

## PDO messages

PDO (Process Data Object) are fast telegram messages that can simply manage most important functions. There are no answers for this kind of messages. Each PDO message has an equivalent Service Data Object message.

### 11. Keys state message

The keypad must be activated, see NMT Start CANopen Node message.

- **PK1400**

Identifier	180h + current CAN ID	Default 195h
Byte 0	Keys from #1 to #8 K8 K7 K6 K5 – K4 K3 K2 K1	Keys: 1=pressed; 0=released
Byte 1	Keys from #9 to #14 0 0 K14 K13 – K12 K11 K10 K9	Keys: 1=pressed; 0=released
Byte 2, 3	00h	Not Used
Byte 4	XXh	Tick Timer*

Examples:

Direction	Identifier	Format	Message	Key state
From Keypad	195	Std	00 00 00 00 XX	No Key pressed
From Keypad	195	Std	04 00 00 00 XX	Only Key #3 pressed
From Keypad	195	std	82 00 00 00 XX	Keys #8 and #2 pressed
From Keypad	195	Std	00 20 00 00 XX	Only Key #14 pressed
From Keypad	195	Std	11 00 00 00 XX	Keys #1 and #5 pressed

\*= this hexadecimal value increases each 100ms regardless a key state variation has occurred or not. This parameter can be used to evaluate the time interval elapsed between two consecutive key states through the difference of the related two tick timer values. Since this counter is coded on 1-byte length, the maximum time interval which can be monitored is about 25 seconds.

### 12. Set LED ON message

The keypad must be activated, see NMT Start CANopen Node message.

- **PK1400 RED**

Identifier	200h + current CAN ID	Default 215h
Byte 0	R8 R7 R6 R5 – R4 R3 R2 R1	Red LED
Byte 1	R16 R15 R14 R13 – R12 R11 R10 R9	Red LED
Byte 2	R24 R23 R22 R21 – R20 R19 R18 R17	Red LED
Byte 3	R32 R31 R30 R29 – R28 R27 R26 R25	Red LED
Byte 4	R40 R39 R38 R37 – R36 R35 R34 R33	Red LED
Byte 5, 7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	215	Std	00 00 00 00 00 00 00 00	Turn off all the LED
To Keypad	215	Std	01 00 00 00 00 00 00 00	Only red LED #1 ON
To Keypad	215	Std	05 00 00 00 00 00 00 00	Red LED #1 and #3 ON, other LED OFF
To Keypad	215	Std	00 20 00 00 00 00 00 00	Only red LED #14 ON
To Keypad	215	Std	00 00 01 00 00 00 00 00	Only red LED #17 ON
To Keypad	215	Std	00 00 00 33 00 00 00 00	Red LED #25, #26, #29, #30 ON
To Keypad	215	Std	00 00 00 00 44 00 00 00	Red LED #35 and #39 ON

- **PK1400 GREEN**

Identifier	300h + current CAN ID	Default 315h
Byte 0	G8 G7 G6 G5 – G4 G3 G2 G1	Green LED
Byte 1	G16 G15 G14 G13 – G12 G11 G10 G9	Green LED
Byte 2	G24 G23 G22 G21 – G20 G19 G18 G17	Green LED
Byte 3	G32 G31 G30 G29 – G28 G27 G26 G25	Green LED
Byte 4	G40 G39 G38 G37 – G36 G35 G34 G33	Green LED
Byte 5, 7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	315	Std	00 00 00 00 00 00 00 00	Turn off all LED
To Keypad	315	Std	04 00 00 00 00 00 00 00	Only green LED #3 ON
To Keypad	315	Std	10 00 00 00 00 00 00 00	Only green LED #5 ON
To Keypad	315	Std	00 21 00 00 00 00 00 00	Green LED #9 and #14 ON
To Keypad	315	Std	00 00 35 00 00 00 00 00	Green LED #17, #19, #21 and #22 ON
To Keypad	315	Std	00 00 00 42 00 00 00 00	Green LED #26 and #31 ON
To Keypad	315	Std	00 00 00 00 86 00 00 00	Green LED #34, #35 and #40 ON

### 13. LED indicators brightness level

The keypad must be activated, see NMT Start CANopen Node message.

NOTE: this setting has temporary effect and at the startup comes back to the default level. If the default level is desired to change, please refer to the [object 2003h sub-index 05h](#).

Identifier	400h + current CAN ID	Default 415h
Byte 0	XXh	Intensity 00h-3Fh → min-100%
Byte 1, 7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	415	Std	08 00 00 00 00 00 00 00	Brightness = 12,5%
To Keypad	415	Std	10 00 00 00 00 00 00 00	Brightness = 25%

### 14. Backlight setting

The keypad must be activated, see NMT Start CANopen Node message.

Note: in case a brightness level value greater than 3Fh is set, the command is neglected.

Note 2: if it is selected as brightness level a value inside the valid range and as backlight color a value outside the available range, the backlight is switched on with the current color stored, the default or the last valid temporary one if set.

Note 3: the backlight color setting has temporary effect. If the default setting is desired to change, please refer to the [object 2003h sub-index 04h](#).

Identifier	500h + current CAN ID	Default 515h
Byte 0	XXh	Brightness level: 00h-3Fh → 0-100%
Byte 1	YYh	Backlight color:
		01h: red 02h: green 03h: blue 04h: yellow 05h: cyan 06h: violet 07h: white/light blue 08h: amber/orange 09h: yellow/green
Byte 2,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	LED
To Keypad	515	Std	00 00 00 00 00 00 00 00	Turn off the backlight
To Keypad	515	Std	20 05 00 00 00 00 00 00	Backlight active at 50% with cyan color

## SDO Messages:

A SDO (Service Data Object) is providing direct access to object entries of a CANopen device's object dictionary.

### 15. Object 2000h: Digital input module, keys states

This module contains all the Switch State information.

A one indicates the switch is on, a zero indicates the switch is off.

The keypad must be enabled, see NMT messages.

The switch state is reported in the From Keypad message from byte 4 to byte 5. The mapping is the same of the PDO Key state message.

- **PK1400**

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 2000h
Byte 2	20h	
Byte 3	01h	Sub index
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 20 01 00 00 00 00	
From Keypad	595	Std	4B 00 20 01 00 00 00 00	No Key pressed
			4B 00 20 01 01 00 00 00	Key 1 pressed
			4B 00 20 01 02 00 00 00	Key 2 pressed
			4B 00 20 01 00 20 00 00	Key 14 pressed
			4B 00 20 01 03 00 00 00	Key 1 and 2 pressed
			4B 00 20 01 20 01 00 00	Key 6 and 9 pressed
			4B 00 20 01 FF 3F 00 00	All Keys pressed

## 16. Object 2001h: Digital output module.

This module sets and reads the LED Outputs States. A one indicates the LED is on, a zero indicates the LED is off.

### a) Set LED ON

- PK1400

#### LED From L1 to L32

Identifier	600h + current CAN ID	Default 615h
Byte 0	23h	Set Device Register
Byte 1	01h	CAN Object 2001h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED from L1 to L32 02h: Green LED from L1 to L32
Byte 4	XXh	L8 L7 L6 L5 – L4 L3 L2 L1
Byte 5	XXh	L16 L15 L14 L13 – L12 L11 L10 L9
Byte 6	XXh	L24 L23 L22 L21 – L20 L19 L18 L17
Byte 7	XXh	L32 L31 L30 L29 – L28 L27 L26 L25

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	23 01 20 01 04 10 20 80	Set red LED #3, #13, #22 and #31 ON
From Keypad	595	Std	60 01 20 01 00 00 00 00	
To Keypad	615	Std	23 01 20 02 80 20 10 01	Set green LED #8, #14, #21 and #25 ON
From Keypad	595	Std	60 01 20 02 00 00 00 00	

#### LED From L33 to L40

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	01h	CAN Object 2001h
Byte 2	20h	
Byte 3	XXh	04h: Red LED from L33 to L40 05h: Green LED from L33 to L40
Byte 4	XXh	L40 L39 L38 L37 – L36 L35 L34 L33
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 01 20 04 01 00 00 00	Set red LED #33 ON
From Keypad	595	Std	60 01 20 04 00 00 00 00	
To Keypad	615	Std	2F 01 20 05 3E 00 00 00	Set green LED #34, #35, #36, #37 and #38 ON
From Keypad	595	Std	60 01 20 05 00 00 00 00	

## b) Read LED ON

The LEDs have the same mapping of Set LED ON message

- **PK1400**

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	01h	CAN Object 2001h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED from L1 to L32 02h: Green LED from L1 to L32 04h: Red LED from L33 to L40 05h: Green LED from L33 to L40
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 01 20 01 00 00 00 00	Read red LED from #1 to #32
From Keypad	595	Std	43 01 20 01 FF FF FF FF	All red LED from #1 to #32 are ON
To Keypad	615	Std	40 01 20 02 00 00 00 00	Read green LED from #1 to #32
From Keypad	595	Std	43 01 20 02 0A 0B 0C 00	Green LED #2, #4, #9, #10, #12, #19, #20 are ON
To Keypad	615	Std	40 01 20 04 00 00 00 00	Read red LED from #33 to #40
From Keypad	595	Std	4F 01 20 04 03 00 00 00	Red LED #33, #34 are ON
To Keypad	615	Std	40 01 20 05 00 00 00 00	Read green LED from #33 to #40
From Keypad	595	Std	4F 01 20 05 06 00 00 00	Green LED #34, #35 are ON

## 17. Object 2002h: Digital output module.

This module sets and reads the LED Blink States.

Each bit position represents the corresponding LED. A one indicates the LED is blinking, a zero indicates the LED is normal. If the blink message is sent when the LED is already ON, the LED blinks in alternate mode.

### a) Set LED blink

- **PK1400**

#### LED From L1 to L32

Identifier	600h + current CAN ID	Default 615h
Byte 0	23h	Set Device Register
Byte 1	02h	CAN Object 2002h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED blink from L1 to L32 02h: Green LED blink from L1 to L32
Byte 4	XXh	L8 L7 L6 L5 – L4 L3 L2 L1
Byte 5	XXh	L16 L15 L14 L13 – L12 L11 L10 L9
Byte 6	XXh	L24 L23 L22 L21 – L20 L19 L18 L17
Byte 7	XXh	L32 L31 L30 L29 – L28 L27 L26 L25

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	23 02 20 01 04 00 00 00	Set red LED #3 blink
From Keypad	595	Std	60 02 20 01 00 00 00 00	
To Keypad	615	Std	23 02 20 02 00 20 00 00	Set green LED #14 blink
From Keypad	595	Std	60 02 20 02 00 00 00 00	
To Keypad	615	Std	23 02 20 01 00 00 88 00	Set red LED #20 and #24 blink

#### LED From L33 to L40

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	02h	CAN Object 2002h
Byte 2	20h	
Byte 3	XXh	04h: Red LED blink from L33 to L40 05h: Green LED blink from L33 to L40
Byte 4	XXh	L40 L39 L38 L37 – L36 L35 L34 L33
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 02 20 04 01 00 00 00	Set red LED #33 blink
From Keypad	595	Std	60 02 20 04 00 00 00 00	
To Keypad	615	Std	2F 02 20 05 1C 00 00 00	Set green LED #35, #36 and #37 blink
From Keypad	595	Std	60 02 20 05 00 00 00 00	

## b) Read LED blink

The LEDs have the same mapping of Set LED ON message

- **PK1400**

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Set Device Register
Byte 1	02h	CAN Object 2002h
Byte 2	20h	
Byte 3	XXh	XX: Sub index 01h: Red LED from L1 to L32 02h: Green LED from L1 to L32 04h: Red LED from L33 to L40 05h: Green LED from L33 to L40
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 02 20 01 00 00 00 00	Read red LED blinking from #1 to #32
From Keypad	595	Std	43 02 20 01 3F 00 00 00	Red LED from #1 to #6 are blinking
To Keypad	615	Std	40 02 20 02 00 00 00 00	Read green LED blinking from #1 to #32
From Keypad	595	Std	43 02 20 02 03 00 00 00	Green LED #1, #2 are blinking
To Keypad	615	Std	40 02 20 04 00 00 00 00	Read red LED blinking from #33 to #40
From Keypad	595	Std	4F 02 20 04 78 00 00 00	Red LED from #36 to #39 are blinking
To Keypad	615	Std	40 02 20 05 00 00 00 00	Read green LED blinking from #33 to #40
From Keypad	595	Std	4F 02 20 05 08 00 00 00	Green LED #36 is blinking

## 18. Object 2003h: Brightness Level

### a) LED indicators brightness level:

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	01h	Sub index
Byte 4	YYh	Intensity 00h-3Fh → min-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	01h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 01 09 00 00 00	Brightness = 15%
From Keypad	595	Std	60 03 20 01 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 01 00 00 00 00	Read brightness level set
From Keypad	595	Std	4F 03 20 01 09 00 00 00	Brightness = 15%

### b) Backlight brightness level

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	02h	Sub index
Byte 4	XXh	Intensity 00h-3Fh → 0-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	02h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 02 0D 00 00 00	Brightness = 20%
From Keypad	595	Std	60 03 20 02 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 02 00 00 00 00	Read brightness level set
From Keypad	595	Std	4F 03 20 02 0D 00 00 00	Brightness = 20%

### c) Backlight color

Set message:

Identifier	615h (600h + current CAN ID)		
Byte 0	2Fh	Set Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	03h	Sub index	
Byte 4	XXh	Color 01h: red 02h: green 03h: blue 04h: yellow	05h: cyan 06h: violet 07h: white/light blue 08: amber/orange 09: yellow/green
Byte 5,7	00h	Not used	

Read message:

Identifier	615h (600h + current CAN ID)		
Byte 0	40h	Read Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	03h	Sub index	
Byte 4,7	00h	Not used	

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 03 05 00 00 00	Cyan backlight color
From Keypad	595	Std	60 03 20 03 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 03 00 00 00 00	Read backlight color set
From Keypad 595	595	Std	4F 03 20 03 04 00 00 00	Cyan backlight color

### d) Default backlight color

Set message:

Identifier	615h (600h + current CAN ID)		
Byte 0	2Fh	Set Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	04h	Sub index	
Byte 4	XXh	Color 01h: red 02h: green 03h: blue 04h: yellow	05h: cyan 06h: violet 07h: white/light blue 08: amber/orange 09: yellow/green
Byte 5,7	00h	Not used	

Read message:

Identifier	615h (600h + current CAN ID)		
Byte 0	40h	Read Device Register	
Byte 1	03h	CAN Object 2003h	
Byte 2	20h		
Byte 3	04h	Sub index	
Byte 4,7	00h	Not used	

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 04 06 00 00 00	Violet backlight color
From Keypad	595	Std	60 03 20 04 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 04 00 00 00 00	Read default color set
From Keypad	595	Std	4F 03 20 04 06 00 00 00	Violet backlight color

### e) Default LED indicators brightness level

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	05h	Sub index
Byte 4	XXh	Intensity 00h-3Fh → min-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	05h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 05 13 00 00 00	Brightness = 30%
From Keypad	595	Std	60 03 20 05 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 05 00 00 00 00	Read brightness level set
From Keypad	595	Std	4F 03 20 05 13 00 00 00	Brightness = 30%

### f) Default backlight brightness level

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	06h	Sub index
Byte 4	XXh	Intensity 00h-3Fh → 0-100%
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 2003h
Byte 2	20h	
Byte 3	06h	Sub index
Byte 5,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 03 20 06 00 16 00 00	Backlight level = 35%
From Keypad	595	Std	60 03 20 06 00 00 00 00	Command accepted
To Keypad	615	Std	40 03 20 06 00 00 00 00	Read backlight level set
From Keypad	595	Std	4F 03 20 06 00 16 00 00	Backlight level = 35%

## 19. Object 2010h: Baud rate setting

Set message:

Identifier	615h (600h + current CAN ID)	
Byte 0	2Fh	Set Device Register
Byte 1	10h	CAN Object 2010h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	00h	1000k
	01h	Reserved (force to 125k)
	02h	500k
	03h	250k
	04h	125k (Default)
	05h	Reserved (force to 125k)
	06h	50k
	07h	20k
Byte 5,7	00h	Not used

Read message:

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	10h	CAN Object 2010h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 10 20 00 04 00 00 00	Baud rate = 125k
From Keypad	595	Std	60 10 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 10 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 10 20 00 04 00 00 00	Baud rate = 125k

## 20. Object 2011h: Set Boot-up service

Object 2011h message enables or disables the boot up message sent by the keypad at power up to the CAN network.

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	11h	CAN Object 2011h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Not active
		01h: Active
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	11h	CAN Object 2011h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 11 20 00 01 00 00 00	Boot-up service active
From Keypad	595	Std	60 11 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 11 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 11 20 00 01 00 00 00	Boot-up service active

## 21. Object 2012h: Set device active on startup

If keypad is active on startup don't need the Start CANopen command from host.

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	12h	CAN Object 2012h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Not active
		01h: Active
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	12h	CAN Object 2012h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 12 20 00 01 00 00 00	Device active on startup
From Keypad	595	Std	60 12 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 12 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 12 20 00 00 00 00 00	Device not active on startup

## 22. Object 2013h: Set CANopen node ID

Note: make sure that when changing node ID to the keypad, no other device on the network has the same address set.

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	13h	CAN Object 2013h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	XX: New node id (01h-7Fh), default 15h
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	13h	CAN Object 2013h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 13 20 00 3A 00 00 00	CANopen node ID set to 3Ah
From Keypad	5BA	Std	60 13 20 00 00 00 00 00	Command accepted
To Keypad	63A	Std	40 13 20 00 00 00 00 00	Read CANopen node ID
From Keypad	5BA	Std	4F 13 20 00 3A 00 00 00	CANopen node ID set to 3Ah

## 23. Object 2014h: Set startup LED show

Set message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	14h	CAN Object 2014h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Disable
		01h: Complete LED Show (default)
		02h: Fast Flash
Byte 5,7	00h	Not used

Read message:

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	14h	CAN Object 2014h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 14 20 00 02 00 00 00	Fast flash show enabled
From Keypad	595	Std	60 14 20 00 00 00 00 00	Command accepted
To Keypad	615	Std	40 14 20 00 00 00 00 00	Read command set
From Keypad	595	Std	4F 14 20 00 02 00 00 00	Fast flash show enabled

## 24. Object 2015h: LED Power supply

This feature enables or disables the power supply of the LEDs. When the power supply is disabled the LED are not accessible and the keypad enters low power mode.

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
	40h	Read Device Register
Byte 1	15h	CAN Object 2015h
Byte 2	20h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Disable
		01h: Enable (default)
Byte 5,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 15 20 00 00 00 00 00	LED power supply disabled
From Keypad	595	Std	60 15 20 00 00 00 00 00	

## 25. Object 2100h: Set DEMO mode

This message enables the Demo mode function. Demo mode is a special feature that consists in different LED states for each button pressing. Refer to the appendix “Demo mode instructions” to try these special features. Disconnect and reconnect the keypad after the enable message to enter this mode. To exit the Demo mode, send the Disable Demo mode command or another command message.

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Fh	Set Device Register
Byte 1	00h	CAN Object 2100h
Byte 2	21h	
Byte 3	00h	Sub index
Byte 4	XXh	00h: Not active
		01h: Active
Byte 5,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2F 00 21 00 01 00 00 00	Set DEMO mode active
From Keypad	595	Std	60 00 21 00 00 00 00 00	

## 26. Object 20FFh: BUS setting

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Bh	Set Device Register
	40h	Read Device Register
Byte 1	FFh	CAN Object 20FFh
Byte 2	20h	
Byte 3	XXh	Sub index
		01h: Reserved
Byte 4	XXh	02h: RS485 bus
		00h: Not active
Byte 5,7	00h	01h: Active
		Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2B FF 20 02 00 00 00 00	Set RS485 bus not active
From Keypad	595	Std	60 FF 20 02 00 00 00 00	

## 27. Object 1016h: Consumer heartbeat time

The consumer heartbeat time object shall indicate the expected heartbeat cycle time. Monitoring of the heartbeat producer shall start after the reception of the first heartbeat.

NOTE 1: the heartbeat consumer time should be greater (typically twice) than the related heartbeat time to be monitored coming from the producer.

NOTE 2: If the keypad does not receive the heartbeat message producer anymore, it turns off all the LEDs eventually ON (both indicators and backlight) and goes to pre-operational state until a new NMT start message is received, even if the producer restarts to transmit the heartbeat.

NOTE 3: if the consumer heartbeat time is set with a value lower than the producer one, the keypad will not be able to change its state from pre-operational to operational.

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
	23h	Set Device Register
Byte 1	16h	CAN Object 1016h
Byte 2	10h	
Byte 3	ZZh	00h: Highest sub-index supported (read-only) 01h: Sub-index (read/write)
Byte 4	YYh	YYh: Heartbeat time in milliseconds LSByte
Byte 5	XXh	XXh: Heartbeat time in milliseconds MSByte
Byte 6	NNh	Node to be monitored 01h-7Fh (01h default)
Byte 7	00h	Reserved

Heartbeat time: XXYYh (from 000Ah to FFFFh: 10ms to 65535 ms)

When the period is set to 0000h, the consumer heartbeat function is disabled.

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 16 10 00 00 00 00 00	Read highest sub-index supported
From Keypad	595	Std	4F 16 10 00 01 00 00 00	01h is the highest sub-index supported
To Keypad	615	Std	23 16 10 01 64 00 7E 00	Set heartbeat time consumer = 100ms expected from the node 7Eh
From Keypad	595	Std	60 16 10 01 00 00 00 00	
To Keypad	615	Std	23 16 10 01 F4 01 01 00	Set heartbeat time consumer = 500ms expected from the node 01h
From Keypad	595	Std	60 16 10 01 00 00 00 00	
To Keypad	615	Std	40 16 10 01 00 00 00 00	Read heartbeat consumer time from the node 01h
From Keypad	595	Std	43 16 10 01 F4 01 01 00	Heartbeat consumer time set to 500ms

## 28. Object 1017h: Producer heartbeat time

The producer heartbeat time shall indicate the configured cycle time of the heartbeat.

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
	2Bh	Set device register
Byte 1	17h	CAN Object 1017h
Byte 2	10h	
Byte 3	00h	Sub index
Byte 4	YYh	YYh: Heartbeat time in LSByte milliseconds
Byte 5	XXh	XXh: Heartbeat time in MSByte milliseconds
Byte 5, 7	00h	Not used

Heartbeat time: XYYh (from 000Ah to FEFh: 10ms to 65279 milliseconds).

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 17 10 00 00 00 00 00	Read heartbeat time
From Keypad	595	Std	4B 17 10 00 64 00 00 00	Heartbeat time = 100ms
To Keypad	615	Std	2B 17 10 00 00 00 00 00	Switch off the heartbeat
From Keypad	595	Std	60 17 10 00 00 00 00 00	
To Keypad	615	Std	2B 17 10 00 32 00 00 00	Set heartbeat time = 50ms
From Keypad	595	Std	60 17 10 00 00 00 00 00	
To Keypad	615	Std	2B 17 10 00 F4 01 00 00	Set heartbeat time = 500ms
From Keypad	595	Std	60 17 10 00 00 00 00 00	

### Heartbeat message

The heartbeat mechanism for a CANopen device is established by cyclically transmitting the heartbeat message by the heartbeat producer. One or more CANopen devices in the network are aware of this heartbeat message. If the heartbeat cycle fails for the heartbeat producer, the local application on the heartbeat consumer will be informed about that event.

If a CANopen device starts with a value for the heartbeat producer time unequal to 0 the boot-up message is regarded as first heartbeat message.

Identifier	700h + current CAN ID	Default 715h
Byte 0	XXh	XXh: State of heartbeat producer 00h: Boot-up 05h: Operational 7Fh: Pre-operational

Example:

Direction	Identifier	Format	Message	Data
From Keypad	715h	Std	00h	Boot up
From Keypad	715h	Std	7Fh	Pre-operational
To keypad	00h	Std	01h 15h	Start keypad with CAN id =15h
From Keypad	715h	Std	05h	Operational

## 29. Object 1000h: Device Type

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 1000h
Byte 2	10h	
Byte 3, 7	00h	Not used

Example:

Direction	Identifier	Format	Data
To Keypad	615	Std	40 00 10 00 00 00 00 00
From Keypad	595	Std	43 00 10 00 91 01 0B 00

Device profile number B191h: Generic I/O module

I/O functionality:

Digital input = implemented;

Digital output = implemented;

Analogue input = not implemented;

Analogue output = not implemented.

## 30. Object 1001h: Error Register

This object is not yet implemented in the device.

### 31. Object 1008h: Manufacturer Device Name

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	08h	CAN Object 1008h
Byte 2	10h	
Byte 3, 7	00h	Not used

1° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	60h	Read Device Register Next Byte
Byte 1, 7	00h	Not used

2° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	70h	Read Device Register Next Byte
Byte 1, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 08 10 00 00 00 00 00	
From Keypad	595	Std	41 08 10 00 0B 00 00 00	
To Keypad	615	Std	60 00 00 00 00 00 00 00	
From Keypad	595	Std	00 42 6C 69 6E 6B 4D 61	BlinkMa
To Keypad	615	Std	70 00 00 00 00 00 00 00	
From Keypad	595	Std	17 72 69 6E 65 00 00 00	rine

Manufacturer Device Name: BlinkMarine

The first byte of the last data message replied is 17h.

### 32. Object 1009h: Manufacturer Hardware Revision

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	09h	CAN Object 1009h
Byte 2	10h	
Byte 3, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 09 10 00 00 00 00 00	
From Keypad	595	Std	43 09 10 00 56 5F 30 33	V_03

Manufacturer Hardware Revision: V\_03

### 33. Object 100Ah: Manufacturer Firmware Revision

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	0Ah	CAN Object 100Ah
Byte 2	10h	
Byte 3, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 0A 10 00 00 00 00 00	
From Keypad	595	Std	43 0A 10 00 56 32 2E 38	V2.8

Manufacturer Firmware Revision: V2.8

### 34. Object 100Bh: Model ID

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	0Bh	CAN Object 100Bh
Byte 2	10h	
Byte 3, 7	00h	Not used

1° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	60h	Read Device Register second byte
Byte 1, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 0B 10 00 00 00 00 00	
From Keypad	595	Std	41 0B 10 00 07 00 00 00	
To Keypad	615	Std	60 00 00 00 00 00 00 00	
From Keypad	595	Std	01 50 4B 31 34 30 30 00	PK1400

Model ID: PK1400

### 35. Object 1011h: Restore default parameters

With this object the default values of parameters according to the communication profile, device profile, and application profile are restored. This procedure shall only be executed when the specific signature "load" is written to the sub-index 01h. When the message shown in the following table is transmitted, the default values shall be restored after the keypad is reset.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	23h	Set Device Register
Byte 1	11h	CAN Object 1011h
Byte 2	10h	
Byte 3	00h	Highest sub-index supported
	01h	Restore all parameters
Byte 4	6Ch	Character 1 "l"
Byte 5	6Fh	Character 2 "o"
Byte 6	61h	Character 3 "a"
Byte 7	64h	Character 4 "d"

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 11 10 00 00 00 00 00	Read highest sub-index
From Keypad	595	Std	4F 11 10 00 01 00 00 00	1
To Keypad	615	Std	23 11 10 01 6C 6F 61 64	'load'
From Keypad	595	Std	43 11 10 01 00 00 00 00	

### 36. Object 1018h: Identity Data

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	18h	CAN Object 1018h
Byte 2	10h	
Byte 3	00h	Number of mapped objects
	01h	Vendor Id
	04h	Serial number
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 18 10 00 00 00 00 00	
From Keypad	595	Std	4F 18 10 00 04 00 00 00	4
To Keypad	615	Std	40 18 10 01 00 00 00 00	
From Keypad	595	Std	43 18 10 01 E2 03 00 00	000003E2h

Blink Marine Vendor Id: 000003E2h

### 37. Object 1400h: Receive PDO communication Parm 0

Describes the Receive Parameters and sets the transmission type for the red LED state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	2Fh	Set Device Register
Byte 1	00h	CAN Object 1400h
Byte 2	14h	
Byte 3	00h	Number of mapped objects
	01h	COB Id
	02h	Transmission Type
Byte 4	XXh	Transmission Type (to be used only in set mode): 00h-F0h: synchronous FEh: event-driven
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 14 00 00 00 00 00	
From Keypad	595	Std	4F 00 14 00 02 00 00 00	2
To Keypad	615	Std	40 00 14 01 00 00 00 00	
From Keypad	595	Std	43 00 14 01 15 02 00 40	4000 0215h
To Keypad	615	Std	40 00 14 02 00 00 00 00	
From Keypad	595	Std	4F 00 14 02 FE 00 00 00	FEh
To Keypad	615	Std	2F 00 14 02 01 00 00 00	Set Synchronous RPDO 0
From Keypad	595	Std	60 00 14 02 00 00 00 00	ACK
To Keypad	80	Std	-	SYNC message received
To Keypad	215	Std	01 00 00 00 00 00 00 00	Request LED 1 red ON: the data are buffered
To Keypad	80	Std	-	SYNC message received and message 215 processed

Receive PDO communication Parm 0:

- Number of mapped objects: 2;
- COB id: 4000 0200h + NODE ID;
- Transmission Type: synchronous or event-driven.

### 38. Object 1401h: Receive PDO communication Parm 1

Describes the Receive Parameters and sets the transmission type for the green LED state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	2Fh	Set Device Register
Byte 1	01h	CAN Object 1401h
Byte 2	14h	
Byte 3	00h	Number of mapped objects
	01h	COB Id
	02h	Transmission Type
Byte 4	XXh	Transmission Type (to be used only in set mode): 00h-F0h: synchronous FEh: event-driven
Byte 5,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 01 14 00 00 00 00 00	
From Keypad	595	Std	4F 01 14 00 02 00 00 00	2
To Keypad	615	Std	40 01 14 01 00 00 00 00	
From Keypad	595	Std	43 01 14 01 15 03 00 40	4000 0315h
To Keypad	615	Std	40 01 14 02 00 00 00 00	
From Keypad	595	Std	4F 01 14 02 FE 00 00 00	FEh
To Keypad	615	Std	2F 01 14 02 00 00 00 00	Set Synchronous RPDO 1
From Keypad	595	Std	60 01 14 02 00 00 00 00	ACK
To Keypad	80	Std	-	SYNC message received
To Keypad	315	Std	00 00 00 00 02 00 00 00	Request LED 34 green blinking: the data are buffered
To Keypad	80	Std	-	SYNC message received and message 315 processed

Receive PDO communication Parm 1:

- Number of mapped objects: 2;
- COB id: 4000 0300h + NODE ID;
- Transmission Type: synchronous or event-driven

### 39. Object 1402h: Receive PDO communication Parm 2

Describes the Receive Parameters for indicator LED brightness

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	02h	CAN Object 1402h
Byte 2	14h	
Byte 3	00h	Number of mapped objects
	01h	COB Id
	02h	Transmission Type
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 02 14 00 00 00 00 00	
From Keypad	595	Std	4F 02 14 00 02 00 00 00	2
To Keypad	615	Std	40 02 14 01 00 00 00 00	
From Keypad	595	Std	43 02 14 01 15 04 00 00	4000 0415h
To Keypad	615	Std	40 02 14 02 00 00 00 00	
From Keypad	595	Std	4B 02 14 02 FE 00 00 00	FEh

Receive PDO communication Parm 2:

- Number of mapped objects: 2;
- COB id: 4000 0415h + NODE ID;
- Transmission Type: FEh.

### 40. Object 1403h: Receive PDO communication Parm 3

Describes the Receive Parameters for backlight LED brightness

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 1403h
Byte 2	14h	
Byte 3	00h	Number of mapped objects
	01h	COB Id
	02h	Transmission Type
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 03 14 00 00 00 00 00	
From Keypad	595	Std	4F 03 14 00 02 00 00 00	2
To Keypad	615	Std	40 03 14 01 00 00 00 00	
From Keypad	595	Std	43 03 14 01 15 05 00 00	4000 0515h
To Keypad	615	Std	40 03 14 02 00 00 00 00	
From Keypad	595	Std	4F 03 14 02 FE 00 00 00	FEh

Receive PDO communication Parm 3:

- Number of mapped objects: 2;
- COB id: 4000 0500h + NODE ID;
- Transmission Type: FEh.

#### 41. Object 1600h: Receive PDO mapping Parameter 0

Describes the mapping of red LED state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 1600h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
	02h	PDO Mapping Entry 2
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 16 00 00 00 00 00	
From Keypad	595	Std	4F 00 16 00 02 00 00 00	2
To Keypad	615	Std	40 00 16 01 00 00 00 00	
From Keypad	595	Std	43 00 16 01 20 01 01 20	2001 01 20
To Keypad	615	Std	40 00 16 02 00 00 00 00	
From Keypad	595	Std	43 00 16 02 08 04 01 20	2001 04 08

Receive PDO mapping Parameter 0:

- Number of mapped objects: 2;
- Set LED red 1-32: Object 2001h, Sub index 01h, Length 20h;
- Set LED red 33-40: Object 2001h, Sub index 04h, Length 08h.

#### 42. Object 1601h: Receive PDO mapping Parameter 1

Describes the mapping of green LED state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	01h	CAN Object 1601h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
	02h	PDO Mapping Entry 2
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 01 16 00 00 00 00 00	
From Keypad	595	Std	4F 01 16 00 02 00 00 00	2
To Keypad	615	Std	40 01 16 01 00 00 00 00	
From Keypad	595	Std	43 01 16 01 20 02 01 20	2001 02 20
To Keypad	615	Std	40 01 16 02 00 00 00 00	
From Keypad	595	Std	43 01 16 02 08 05 01 20	2001 05 08

Receive PDO mapping Parameter 1:

- Number of mapped objects: 2;
- Set LED green 1-32: Object 2001h, Sub index 02h, Length 20h;
- Set LED green 33-40: Object 2001h, Sub index 05h, Length 08h.

#### 43. Object 1602h: Receive PDO mapping Parameter 2

Describes the mapping of Indicator LED brightness PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	02h	CAN Object 1602h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 02 16 00 00 00 00 00	
From Keypad	595	Std	4F 02 16 00 01 00 00 00	1
To Keypad	615	Std	40 02 16 01 00 00 00 00	
From Keypad	595	Std	43 02 16 01 08 02 03 20	2003 01 08

Receive PDO mapping Parameter 2:

- Number of mapped objects: 1;
- Set Indicator LED brightness: Object 2003h, Sub index 01h, Length 08h.

#### 44. Object 1603h: Receive PDO mapping Parameter 3

Describes the mapping of Backlight setting PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	03h	CAN Object 1603h
Byte 2	16h	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
	02h	PDO Mapping Entry 2
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 03 16 00 00 00 00 00	
From Keypad	595	Std	4F 03 16 00 02 00 00 00	2
To Keypad	615	Std	40 03 16 01 00 00 00 00	
From Keypad	595	Std	43 03 16 01 08 02 03 20	2003 02 08
To Keypad	615	Std	40 03 16 02 00 00 00 00	
From Keypad	595	Std	43 03 16 02 08 03 03 20	2003 03 08

Receive PDO mapping Parameter 3:

- Number of mapped objects: 2;
- Backlight brightness level: Object 2003h, Sub index 02h, Length 08h;
- Backlight color: Object 2003h, Sub-index 03h, Length 08h.

## 45. Object 1800h:

### a) Transmit PDO Communication Parm 0

Describes the Transmission Parameters and sets the transmission type for the Key state PDO message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
	2Fh	Set Device Register
Byte 1	00h	CAN Object 1800h
Byte 2	18h	
Byte 3	00h	Highest sub-index supported
	01h	COB Id
	02h	Transmission Type
	05h	Event Timer (Periodic transmission time)
Byte 4	XXh	Transmission Type (to be used only in set mode): 01h: synchronous (cyclic every SYNC) 02h: synchronous (cyclic every 2 <sup>nd</sup> SYNC) 03h: synchronous (cyclic every 3 <sup>rd</sup> SYNC) 04h: synchronous (cyclic every 4 <sup>th</sup> SYNC) .... F0h: synchronous (cyclic every 240 <sup>th</sup> SYNC) FEh: event-driven (default)
Byte 5,7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 18 00 00 00 00 00	
From Keypad	595	Std	4F 00 18 00 05 00 00 00	5
To Keypad	615	Std	40 00 18 01 00 00 00 00	
From Keypad	595	Std	43 00 18 01 95 01 00 40	4000 0195h
To Keypad	615	Std	40 00 18 02 00 00 00 00	
From Keypad	595	Std	4F 00 18 02 FE 00 00 00	FEh
To Keypad	615	Std	40 00 18 05 00 00 00 00	
From Keypad	595	Std	4B 00 18 05 00 00 00 00	0000h: Periodic transmission disabled
To Keypad	615	Std	2F 00 18 02 01 00 00 00	Set the Synchronous transmission (cyclic every SYNC)
From Keypad	595	Std	60 00 18 02 00 00 00 00	ACK
To Keypad	80	Std	-	SYNC message received
Key #1 pressed No message on the CAN bus				
From Keypad	195	Std	00 00 00 00 XX	Key status sent/Read key status
To Keypad	80	Std	-	SYNC message received
From Keypad	195	Std	01 00 00 00 XX	Key status sent/Read key status

Transmit PDO communication Parm 0:

- Highest sub-index supported: 5;
- Address base: 4000 0195h = 4000 0180h+ NODE ID;
- Transmission Type: FEh;
- Periodic Transmission timer: XXYY in milliseconds, 0 = OFF.

## b) Set periodic state transmission

Identifier	600h + current CAN ID	Default 615h
Byte 0	2Bh	Set device register
Byte 1	00h	CAN Object 1800h
Byte 2	18h	
Byte 3	05h	Sub index
Byte 4	YYh	YYh: Periodic transmission timer in milliseconds LSByte
Byte 5	XXh	XXh: Periodic transmission timer in milliseconds MSByte
Byte 6, 7	00h	Not used

Event timer period: XYYh (from 000Ah to FEFFh: 10ms to 65279 milliseconds).

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	2B 00 18 05 00 00 00 00	Switch off the periodic transmission
From Keypad	595	Std	60 00 18 05 00 00 00 00	
To Keypad	615	Std	2B 00 18 05 32 00 00 00	Set period = 50ms
From Keypad	595	Std	60 00 18 05 00 00 00 00	
To Keypad	615	Std	2B 00 18 05 F4 01 00 00	Set period = 500ms
From Keypad	595	Std	60 00 18 05 00 00 00 00	

## 46. Object 1A00h Transmit PDO Mapping Parameter

Describes the mapping of KEY state PDO Message.

Identifier	615h (600h + current CAN ID)	
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 1A00h
Byte 2	1Ah	
Byte 3	00h	Number of mapped objects
	01h	PDO Mapping Entry 1
Byte 4,7	00h	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	40 00 1A 00 00 00 00 00	
From Keypad	595	Std	4F 00 1A 00 01 00 00 00	1
To Keypad	615	Std	40 00 1A 01 00 00 00 00	
From Keypad	595	Std	43 00 1A 01 10 01 00 20	2000 01 10

Transmit PDO Mapping Parameter:

- Number of mapped objects: 1;
- Switch state: Object 2000h, Sub index 01h, Length 10h.

## 47. Object 2200h: Serial number string

Identifier	600h + current CAN ID	Default 615h
Byte 0	40h	Read Device Register
Byte 1	00h	CAN Object 2200h
Byte 2	22h	
Byte 3,7	00h	Not used

1° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	60h	Read Device Register second byte
Byte 1, 7	00h	Not used

2° additional byte

Identifier	600h + current CAN ID	Default 615h
Byte 0	70h	Read Device Register third byte
Byte 1, 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	615	Std	41 00 22 00 00 00 00 00	
From Keypad	595	Std	41 00 22 00 08 00 00 00	
To Keypad	615	Std	60 00 00 00 00 00 00 00	
From Keypad	595	Std	00 46 46 46 46 46 46 46	FFFFFF
To Keypad	615	Std	70 00 00 00 00 00 00 00	
From Keypad	595	Std	1D 46 00 00 00 00 00 00	F

Serial number: ascii FFFFFFFF

## 48. Set CAN protocol

This set of messages are used to change to the desired CANbus protocol.

- Change from CANopen to J1939:

Direction	Identifier	Format	Message	Data
To Keypad	615h	Std	2B FF 20 01 01	Change to J1939

- Change from J1939 to CANopen:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 80 00 FF FF FF FF	Change to CANopen

## APPENDIX: DEMO Mode instructions

In DEMO Mode you can try the following functions by pressing buttons on the PK1400.  
Entering this mode, you turn on key-LEDs with color red.

For the key 1, each time you press the button you can change the color of key-LEDs with this sequence:

1. Green;
2. Color 03\*;
3. Color 04\*\*;
4. OFF.

Pressing key 2, you can increase LED and backlight brightness.

Pressing key 3, you can decrease LED and backlight brightness.

For the key 4, each time that you press the button, there are different steps in this sequence:

1. Complete LED show of all colors: at first with red, then green, color 03\*, and at the end color 04\*\*;
2. Turning on/off backlight and each single key-LED with the possibility to change color by pressing key 1;
3. Pause step 2;
4. Return to the starting demo mode state.

Pressing key 5, you can change the backlight color.

If you press the other keys, there are no events.

---

\* Obtained by mixing red at 50% and green at 100%

\*\* Obtained by mixing red at 25% and green at 100%

## 49. Revision history

Date	Manual Revision	Comment
20/06/2016	1.0	Preliminary
12/07/2016	1.1	Added PDO 400h and 500h. Updated examples for the object 2000h. Added object 2001h, 2002h, 2003h, 2014h, 2015h, 20FFh.
20/03/2017	1.2	New software release with protocol change message.
14/03/2018	1.3	New version: <ul style="list-style-type: none"><li>• Added set CAN PROTOCOL command</li><li>• Added demo mode instructions</li><li>• Corrected messages of objects 1400h, 1401h, 1402h, 1403h</li><li>• Added objects 1604h, 1605h</li></ul>
07/01/2019	1.4	<ul style="list-style-type: none"><li>• Added object 1016h: heartbeat consumer time</li><li>• Enabled synchronous transmission for RPDOs 200h/300h and TPDO 180h</li><li>• Added warning note at page 3</li><li>• Removed objects 1604h, 1605h</li></ul>
11/03/2019	1.5	<ul style="list-style-type: none"><li>• Added object 1011h</li></ul>
25/10/2021	1.6	<ul style="list-style-type: none"><li>• Added SDO read commands;</li><li>• Added note concerning TICK TIMER;</li><li>• Modified the PDO backlight command;</li><li>• Added sub-index 02h in the object 1603h;</li><li>• Added note on page 3;</li></ul>
20/12/2021	1.7	<ul style="list-style-type: none"><li>• Modified description of chapter 14;</li></ul>