


Summary:

- 1. How to connect the wires: 2
- 2. Reference..... 2
- 3. Message header description 3
- 4. General Data Format 3
- 5. Default Settings 4
- 6. Key Contact state (01h) 4
- 7. LED command:..... 5
 - a. Set single LED state (01h) 5
 - b. Set multiple LED state..... 6
- 8. Set LED indicators brightness level (02h) 8
- 9. Set backlight level (03h) 8
- 10. Set startup keys message(28h)..... 8
- 11. Get software revision (2Ah)..... 9
- 12. Set startup LED show (34h) 9
- 13. Set LED management mode (37h)..... 9
- 14. Set Destination Address (6Eh) 10
- 15. Baud rate setting (6Fh) 10
- 16. Set Source Address (70h)..... 11
- 17. Periodic key-state transmission (71h) 11
- 18. Event state transmission (72h) 12
- 19. LED Acknowledgment (73h) 12
- 20. Address Claim at boot (74h) 13
- 21. Heartbeat (75h) 14
- 22. Key-state message period (77h) 15
- 23. Start Demo mode(7Ah)..... 15
- 24. Default backlight brightness level (7Bh)..... 16
- 25. Default LED indicators brightness level (7Ch) 16
- 26. Default backlight color (7Dh)..... 17
- 27. Set CAN protocol 17
- APPENDIX: DEMO Mode instructions..... 18
- 28. Revision history 19

1. How to connect the wires:



PIN	COLOUR	FUNCTION
1	Blue	CAN L
2	White	CAN H
3	Black	Negative battery
4	Red	Vbatt. (12-24V)

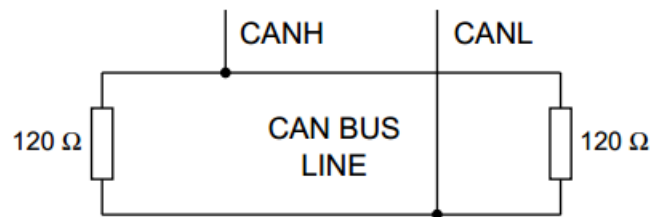


Each end of the CAN bus is terminated with 120Ω resistors in compliance with the standard to minimize signal reflections on the bus. You may need to place a 120Ω resistor between CAN-L and CAN-H.



Warning: to avoid breakage do not tighten the backshell nuts with a torque exceeding 0.8 Nm!

2. Reference

PKP2300

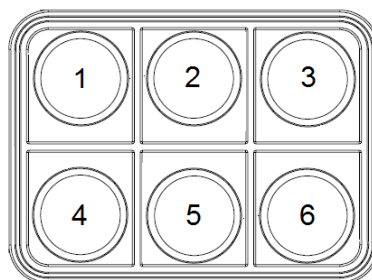

3. Message header description

The 29-bit CAN identifier used in J1939 is structured in the following way.

Priority	Reserved	Data Page	PDU Format	PDU Specific	Source Address
3 bits	1 bit	1 bit	8 bits	8 bits	8 bits

The proprietary format used by PKP keypads is defined as follows:

Priority = **6**.

Reserved = **0**.

Data page = **0**.

PDU Format = EFh (the message is addressable).

PDU Specific = Destination Address.

Parameter Group Number:

61184 (EF00h) [PROPRIETARY A] used for configuration messages and LED command a (see page 5).

42752 (A700h) [AUXILIARY I/O #2]

42496 (A600h) [AUXILIARY I/O #3]

(See ISO 11783-3 for further details).

} Specifically used for LED command b (see page 6-7).

An example of CAN identifier of messages sent to the keypad is 18EF2100h where:

21h is the destination address (keypad)

00h is the source address.

An example of CAN identifier of messages sent by the keypad is 18EFFF21h where:

FFh refers to broadcast messages (no specific destination address)

21h is the source address (keypad).

4. General Data Format

The proprietary protocol has defined a general format for the data fields in the PGN 61184. The format consists of:

1 header field (2 bytes)

1 command byte

5 bytes (the remaining field) are defined specifically for each command.

The data length is 8 bytes, unused bits and bytes are set to all 1's (0xFF).

Byte 0	04h
Byte 1	1Bh
Byte 2	Command
Byte 3-7	Data required for each specific command

5. Default Settings

Setting	Default state or level	How to change
CAN bus baud rate	250 kbit/s	Command 6Fh
Source address	21h	Command 70h
Keypad identifier	21h	Command 70h
Destination address	FFh	Command 6Eh
Heartbeat	Disabled	Command 75h
Periodic key-state message transmission	Disabled	Command 71h
Key-state message period	100ms	Command 77h
Event state transmission	Enabled	Command 72h
Address claim message at boot	Disabled	Command 74h
Default LED indicators brightness level	3Fh	Command 7Ch
Default backlight brightness level	OFF	Command 7Bh
Startup LED show	Complete LED Sequence	Command 34h
Default backlight color	Amber	Command 7Dh
LED acknowledgment	Disabled	Command 73h

6. Key Contact state (01h)

This message is sent by the keypad to indicate the state of the contacts. The default destination address is set to FFh: broadcast message. See chapter 2 for Key number reference.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	01h	Key Contact state
Byte 3	XXh	XX: Key number
Byte 4	YYh	Contact State 00: Switch OFF (Key released) 01: Switch ON (Key pressed)
Byte 5	ZZh	Keypad Identifier (default 21h)
Byte 6,7	FFh	Not used

Examples:

Direction	Identifier	Format	Message	Data
From Keypad	18EFFF21h	Ext	04 1B 01 01 01 21 FF FF	Key 1 ON
From Keypad	18EFFF21h	Ext	04 1B 01 01 00 21 FF FF	Key 1 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 02 01 21 FF FF	Key 2 ON
From Keypad	18EFFF21h	Ext	04 1B 01 02 00 21 FF FF	Key 2 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 03 01 21 FF FF	Key 3 ON
From Keypad	18EFFF21h	Ext	04 1B 01 03 00 21 FF FF	Key 3 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 04 01 21 FF FF	Key 4 ON
From Keypad	18EFFF21h	Ext	04 1B 01 04 00 21 FF FF	Key 4 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 05 01 21 FF FF	Key 5 ON
From Keypad	18EFFF21h	Ext	04 1B 01 05 00 21 FF FF	Key 5 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 06 01 21 FF FF	Key 6 ON
From Keypad	18EFFF21h	Ext	04 1B 01 06 00 21 FF FF	Key 6 OFF

If the Event state transmission is enabled, the Key Contact state message is sent when a key is switched.

If the periodic key-state transmission is enabled (see [Command 71h](#) for further details), at each given time interval a Key Contact state message is transmitted for each button of the keypad.

7. LED command:

a. Set single LED state (01h)

The following message sent to the keypad allows to set one single LED indicator with the color and state shown in the table below.

See chapter 2 for Key and LED number reference.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	01h	Set single LED state
Byte 3	XXh	XX: PKP Key number
Byte 4	YYh	LED Color 00h: off 01h: red 02h: green 03h: blue 04h: yellow 05h: cyan 06h: magenta 07h: white/light blue 08h: amber/orange 09h: yellow/green
Byte 5	ZZh	LED State 00: off 01: on 02: blink 03: alternate blink
Byte 6	WWh	LED Secondary Color (only for alt blink) 00: off 01: red 02: green 03: blue 04: yellow 05: cyan 06: magenta 07h: white/light blue 08h: amber/orange 09h: yellow/green
Byte 7	FFh	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 01 01 01 01 00 FF	LED Key1 red on
To Keypad	18EF2100h	Ext	04 1B 01 01 01 00 00 FF	LED Key1 off
To Keypad	18EF2100h	Ext	04 1B 01 02 03 01 00 FF	LED Key2 blue on
To Keypad	18EF2100h	Ext	04 1B 01 04 05 01 00 FF	LED Key4 cyan on
To Keypad	18EF2100h	Ext	04 1B 01 06 07 02 00 FF	LED Key6 blinks white
To Keypad	18EF2100h	Ext	04 1B 01 03 01 03 02 FF	LED Key3 blinks green and red in alternate mode

b. Set multiple LED state

This command used as an alternative to the one described in the previous sub-chapter allows to manage more LED indicators at once. See the [command 37h](#) to enable it.

The LED state and color can be controlled by using either or both the CAN data frames (shown in the tables 1 and 2 below) depending on the light mode you want to set: the available functions are summarized in the table 3 at page 8.

The message to be sent to the keypad is structured so that each of four bit field within the 64 data bits controls a corresponding key-LED.

TABLE 1:

PGN	A700h		AUXILIARY I/O #2		
Identifier	18A72100h		CAN FRAME: color 1		
Byte 0	YXh		Value to be assigned to X and Y 0 0 0 1 b 1h Red 0 0 1 0 b 2h Green 0 0 1 1 b 3h Blue 0 1 0 0 b 4h Yellow 0 1 0 1 b 5h Cyan 0 1 1 0 b 6h Magenta 0 1 1 1 b 7h White/light blue 1 0 0 0 b 8h Amber/orange 1 0 0 1 b 9h Yellow/green 1 0 1 0 b Ah } 1 0 1 1 b Bh } 1 1 0 0 b Ch } Not used 1 1 0 1 b Dh } 1 1 1 0 b Eh }		
	Xh	LED 1			
	Yh	LED 2			
Byte 1	YXh				
	Xh	LED 3			
	Yh	LED 4			
Byte 2	YXh				
	Xh	LED 5			
	Yh	LED 6			
Byte 3,7	FFh	Not used			

TABLE 2:

PGN	A600h		AUXILIARY I/O #3
Identifier	18A62100h		CAN FRAME: color 2
Byte 0	YXh		<p>Value to be assigned to X and Y</p> <p>LED color</p> <p>0 0 0 1 b 1h Red</p> <p>0 0 1 0 b 2h Green</p> <p>0 0 1 1 b 3h Blue</p> <p>0 1 0 0 b 4h Yellow</p> <p>0 1 0 1 b 5h Cyan</p> <p>0 1 1 0 b 6h Magenta</p> <p>0 1 1 1 b 7h White/light blue</p> <p>1 0 0 0 b 8h Amber/orange</p> <p>1 0 0 1 b 9h Yellow/green</p> <p>1 0 1 0 b Ah</p> <p>1 0 1 1 b Bh</p> <p>1 1 0 0 b Ch</p> <p>1 1 0 1 b Dh</p> <p>1 1 1 0 b Eh</p> <p>Not used</p>
	Xh	LED 1	
	Yh	LED 2	
Byte 1	YXh		
	Xh	LED 3	
	Yh	LED 4	
Byte 2	YXh		
	Xh	LED 5	
	Yh	LED 6	
Byte 3,7	FFh	Not used	

TABLE 3:

CAN frame: color 1	CAN frame: color 2	LED state
0h	0h	LED OFF
Value from 1h to 9h	0h	LED ON with the chosen color
0h	Value from 1h to 9h	
Value from 1h to 9h	Same value of color 1	LED ALT BLINKS with the chosen color
Same value of color 2	Value from 1h to 9h	
Value from 1h to 9h	Different value from color 1	LED ALT BLINKS between the two different colors
Different value from color 2	Value from 1h to 9h	
Value from 1h to 9h	Fh	LED BLINKS with the chosen color
Fh	Value from 1h to 9h	

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	18A72100h	Ext	11 01 FF FF FF FF FF FF	LED #1,2,3 red ON
To Keypad	18A62100h	Ext	00 4F FF FF FF FF FF FF	LED #4 yellow
To Keypad	18A72100h	Ext	00 02 FF FF FF FF FF FF	LED #3 alt blinks green
To Keypad	18A62100h	Ext	00 02 FF FF FF FF FF FF	
To Keypad	18A72100h	Ext	77 77 77 FF FF FF FF FF	All LED white ON

8. Set LED indicators brightness level (02h)

This message sets the value of the LED indicators brightness level. The value can be set from 0 to 3Fh (min-100%) of the LED dimming range.

NOTE: this setting has temporary effect and at the startup comes back to the default level. If the default value is desired to change, please refer to the [Command 7Ch](#).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	02h	Set LED indicators brightness level
Byte 3	XXh	XX: Dim Value (default 3Fh) From 00h (min) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 02 13 FF FF FF FF	Brightness set to 30%

9. Set backlight level (03h)

This message sets the value of the backlight brightness. The value can be set from 0 to 3Fh (0-100%) of the brightness range.

NOTE: this setting has temporary effect and at the startup comes back to the default level. If the default value is desired to change, please refer to the [Command 7Bh](#).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	03h	Set backlight level
Byte 3	XXh	XX: Value (default 00h) From 00h (0%) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 03 1C FF FF FF FF	Backlight level set to 45%

10. Set startup keys message(28h)

This command enables the transmission during power up of the state of the keys.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	28h	Set startup keys message
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 28 01 FF FF FF FF	Startup keys message enabled

11. Get software revision (2Ah)

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	2Ah	Get software revision
Byte 3,7	FFh	Not used

Answer:

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	2Ah	Get software revision
Byte 3,6	XXh XXh XXh XXh	SW revision ASCII
Byte 7	00h	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 2A FF FF FF FF FF	Get software revision
From Keypad	18EFF21h	Ext	04 1B 2A 56 32 2E 31 30	V2.10

12. Set startup LED show (34h)

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	34h	Set startup LED show
Byte 3	XXh	XX: 00h: OFF 01h: Complete LED show (default) 02h: Fast flash
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 34 00 FF FF FF FF	Startup LED show set to OFF

13. Set LED management mode (37h)

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	37h	Set startup LED show
Byte 3	XXh	XX: 00h single LED state enabled (default) 02h single/multiple LED state enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 37 02 FF FF FF FF	Single/multiple LED state enabled

14. Set Destination Address (6Eh)

This message is used to set the addressee node of the Key Contact state transmitted by the keypad. The default destination address is FFh (broadcast).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	6Eh	Set Destination Address
Byte 3	XXh	XX: CAN Destination Address From 00h to FFh FEh: reserved
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 6E 00 FF FF FF FF	CAN destination address set to 00h

15. Baud rate setting (6Fh)

This message is used to change the baud rate of the CAN bus. Connecting only one keypad to the bus when changing the baud rate is recommended. If an invalid value is chosen, then no change is done to the stored value.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	6Fh	Baud rate setting
Byte 3	02h	500kbit/s
	03h	250kbit/s
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 6F 02 FF FF FF FF	Baud rate set to 500kbit/s

16. Set Source Address (70h)

This message is used to change the keypad CAN Source Address and/or the Keypad Identifier. Either or both the Source Address or Keypad Identifier may be changed independently. Connecting only one keypad to the bus when changing the keypad address is recommended. If an invalid value is chosen, then no change is done to the stored value.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	70h	Set Source Address
Byte 3	XXh	XX: CAN Source Address From 01h to FDh FEh: reserved FFh: no change
Byte 4	YYh	YY: Keypad Identifier From 00h to FDh FEh: reserved FFh: no change
Byte 5,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 70 43 5F FF FF FF	Source address set to 43h; Keypad identifier set to 5Fh.

17. Periodic key-state transmission (71h)

This message enables or disables the periodic transmission of the Key state. When enabled, one contact state message is periodically sent for each button of the keypad. The period is set to 100ms as default value but can be changed by command 77h.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	71h	Periodic key-state transmission
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 71 01 FF FF FF	Periodic key-state transmission enabled

18. Event state transmission (72h)

This message enables or disables event driven key state transmissions. When this feature is enabled, the keypad transmits the state of a contact at the time that the contact changes state (pressed or released).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	72h	Event state transmission
Byte 3	XXh	XX: 00h Disabled 01h Enabled (default)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 72 00 FF FF FF FF	Event state transmission disabled

19. LED Acknowledgment (73h)

This command enables or disables the transmission of the LED Acknowledgement message. When this feature is enabled the keypad transmits an acknowledgement message each time a single LED state is set by using the specific command (see chapter 7a. LED COMMAND).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	73h	LED Acknowledgement
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 73 01 FF FF FF FF	LED acknowledgement enabled
To Keypad	18EF2100h	Ext	04 1B 01 01 04 03 05 FF	LED Command
From Keypad	18EFFF21h	Ext	00 03 01 04 05 FF FF FF	LED Ack message

LED Acknowledgment message:

Byte 0	00h	
Byte 1	XXh	XX: LED state
Byte 2	YYh	YY: LED number
Byte 3	PPh	PP: Primary color
Byte 4	ZZh	ZZ: Secondary color
Byte 5,7	FFh	Not used

20. Address Claim at boot (74h)

This message enables or disables the address claim procedure.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	74h	Address claim at boot
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 74 01 FF FF FF FF	Address claim enabled

Address claiming procedure:

Under normal operation, the keypad application sends an Address Claim parameter group at start up and waits up to 250 ms for the other devices connected to the same network to send a message containing the device's address and name. The keypad checks every response and compares the names to see who has the highest priority. If a device is already using the address and has a higher priority, then a new address is selected, and the process starts over. If the keypad has a higher priority than the device in use then it waits for other systems to reply, while the responding device will have to change its address and send an address claim itself. If no message is received after the time (250ms) is up, then the device has claimed the address.

Address claim parameter group:

Priority = 6.

Destination Address should always be the Global Address FFh

Parameter Group Number (PGN) = 60928(EE00h).

Data Length = 8

Data = NAME field

Example:

Direction	Identifier	Format	Message	Data
From Keypad	18EEFF21h	Ext	3F 42 6F 1A 00 82 3C C0	

21. Heartbeat (75h)

This command enables or disables the transmission of Heartbeat message. This message is designed to indicate to other devices on the bus the keypad continues to function.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	75h	Heartbeat
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4	YYh	YY: Period in milliseconds ÷ 10 From 05h (50ms) to FEh (2.54 sec)
Byte 5,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 75 01 FE FF FF FF	Heartbeat enabled with 2.54s period.

Heartbeat generated message:

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	F9h	Heartbeat message
Byte 3	XXh	XX: Message counter, incremented each message sent
Byte 4	00 00 K6 K5 K4 K3 K2 K1	Button state indicators Each bit represents a button state 0: OFF 1: ON
Byte 5	00h	
Byte 6	FFh	Not used
Byte 7	21h	Keypad identifier

Example:

Direction	Identifier	Format	Message	Data
From Keypad	18EFFF21h	Ext	04 1B F9 03 02 00 FF 21	Heartbeat message with button 2 pressed.
From Keypad	18EFFF21h	Ext	04 1B F9 03 08 00 FF 21	Heartbeat message with button 4 pressed

22. Key-state message period (77h)

This message sets the period time for the PERIODIC KEY-STATE TRANSMISSION (71h).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	77h	Key-state message period
Byte 3	XXh	XX: Period in milliseconds ÷ 10 From 05h (50ms) to FEh (2.54 sec)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 77 0F FF FF FF FF	Period set to 150ms

23. Start Demo mode(7Ah)

This message enables the Demo mode function. Demo mode is a special feature that consists in different LED states for each button pressing. Refer to the appendix “Demo mode instructions” to try these special features. Disconnect and reconnect the keypad after sending the message to enter this mode. To exit the Demo mode, send the Disable Demo mode command or another command message.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Ah	Start Demo mode
Byte 3	XXh	XX: 00h Disabled (Default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7A 01 FF FF FF FF	Demo mode enabled

24. Default backlight brightness level (7Bh)

This message sets the default value of the backlight brightness. The level can be set from 0 to 3Fh (0-100%) of the brightness range.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Bh	Default backlight brightness level
Byte 3	XXh	XX: Value From 00h (0%) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7B 32 FF FF FF FF	Default backlight level set to 80%

25. Default LED indicators brightness level (7Ch)

This message sets the default value of the LED indicators brightness. The value can be set from 0 to 3Fh (min-100%) of the LED dimming range.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Ch	Default LED indicators brightness level
Byte 3	XXh	XX: Value From 00h (min) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7C 29 FF FF FF FF	Default LED dim set to 65%

26. Default backlight color (7Dh)

This message sets the default color of the backlight.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Dh	Default backlight color
Byte 3	XXh	XX: color 01: red 02: green 03: blue 04: yellow 05: cyan 06: magenta 07h: white/light blue 08h: amber/orange 09h: yellow/green
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7D 02 FF FF FF FF	Default backlight color set to magenta

27. Set CAN protocol

This set of messages are used to change to the desired CANbus protocol.

- Change from J1939 to CANopen:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 80 00 FF FF FF FF	Change to CANopen

- Change from CANopen to J1939:

Direction	Identifier	Format	Message	Data
To Keypad	615h	Std	2B FF 20 01 01	Change to J1939

APPENDIX: DEMO Mode instructions

In DEMO Mode you can try the following functions by pressing buttons on the PKP2300SI.

Entering this mode, you turn the LED indicators on with red color; each time you press the key 1 you can change the color of the indicators with the following sequence:

1. Red;
2. Green;
3. Blue;
4. Yellow;
5. Cyan;
6. Magenta;
7. White/light blue;
8. Amber;
9. Yellow/green;
10. OFF.

Holding down key 2, you can increase LED brightness level.

Holding down key 3, you can decrease LED brightness level.

If you press the key 4, there are different steps in this sequence:

1. Complete LED show of all colors;
2. Backlight active with keys on in sequence (it is possible to change the color of LED keys by pressing button 1);
3. Alternate blinking of LED keys number 1 red color; 2 with amber color; 3 with yellow; 4 with green color; 5 with cyan color and 6 with white/light blue color.

In the case you press the other keys there are no events.

28. Revision history

Date	Manual Revision	Comment	Related SW version
11/11/2016	1.0	First release PKP2300 J1939 user manual	SW1.0J
22/05/2017	1.1	Added Baud rate setting command 6Fh Changed address limits	SW1.8
30/01/2018	1.2	Third release PKP2300 J1939 user manual <ul style="list-style-type: none"> • Included command 02h in the default settings table • Added some examples in Key contact state and LED command functions • Corrected minimum values of LED brightness • Updated LED acknowledgment message with extra bytes concerning primary and secondary color • Added set CANprotocol command • Added APPENDIX: DEMO MODE instructions 	SW x.x
21/02/2019	1.3	Fourth release PKP2300 J1939 user manual: <ul style="list-style-type: none"> • Added warning note 	SW x.x
07/05/2019	1.4	Fifth release PKP2300 J1939 user manual: <ul style="list-style-type: none"> • In compliance with the SAE J1939 standard, in the command {70h} the value FEh has been excluded from the list of the addresses assignable by the user to the keypad 	SW x.x
22/06/2020	1.5	Sixth release PKP2300 J1939 user manual: <ul style="list-style-type: none"> • DEMO mode instructions chapter reviewed • Added multiple LED state command 	SW x.x
28/09/2020	1.6	Seventh release PKP2300 J1939 user manual: <ul style="list-style-type: none"> • Added command 6Eh 	